



# User Manual

---

## **PIXPRO 360 VR Remote Viewer**

(Smart Device Version)

for

KODAK PIXPRO ORBIT360 4K/4KVR360 VR Camera

# Before You Start

---

## Declaration of Conformity

Responsible Party: JK Imaging Ltd.

Address: JK Imaging Ltd., 17239 So. Main Street, Gardena, CA 90248 USA

Company Website: [kodakpixpro.com](http://kodakpixpro.com)

## About this Manual

- JK Imaging reserves all rights of this document. No part of this published manual may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form, by any means, without the prior written permission of JK Imaging Ltd.
- All trademarks mentioned in this manual are used for identification purposes only and are properties of their respective owners.
- This manual will instruct you on how to operate the PIXPRO 360 VR Remote Viewer APP. Every effort has been made to ensure that the contents of this manual are accurate, however, JK Imaging reserves the right to modify and make updates and changes as necessary.
- Throughout this manual, the following symbols are used to help you locate information quickly and easily:



Indicates useful information



Indicates pressing and holding in a certain point



Indicates tap a certain point

## Matters Needing Attention

- Your Smart Device operating system needs to be version iOS 14 or higher, or ANDROID 8.0 or higher. iPad mini 1 / iPad 4 / iPad Air 1 / iPhone 5S and earlier models (using any system versions) will not support this APP.
- Do not use in places with high intensity magnetic fields, electrostatic and electric wave interference (for example near a microwave oven), which may or may not cause failure in the camera receiving proper signals.
- Do not use the Wi-Fi or NFC connection or functions on an airplane.
- When using the Wi-Fi or NFC connection, the camera and the Smart Device can only be connected one to one. Please keep the camera within 10 meters (32.8 feet) avoiding signal shielding interference.
- When the Smart Device detects its operating system to be out of memory, the APP will not be able to operate normally. Please check the memory of your Smart Device and make any necessary updates.
- We will update the APP from time to time. Some new features will require you to synchronously update the firmware version of the camera in order to ensure the stability of the system. Please note for these types of prompts on the APP.




# Contents






 
---

---

Before You Start.....	1
Contents .....	3
Connecting the Camera with your Smart Device .....	6
Downloading and Installing the APP .....	6
Establishing Connection.....	7
Wi-Fi Connections (iOS and ANDROID Systems) .....	7
NFC Connection (ANDROID System).....	7
Operation Methods .....	9
Remote Viewfinder.....	9
Remote Viewfinder Interface .....	9
Parameter Settings.....	11
Shooting Mode.....	11
Image Size .....	13
Movie Size.....	14




Unfold Mode .....	15
Camera Modes .....	16
Function Menu.....	17
Menu .....	21
Shooting Settings  .....	22
General Settings  .....	24
Shooting Methods .....	28
Shooting .....	28
Video Recording.....	29
Playback .....	30
Switching of the Remote Viewfinder Mode and Playback Mode.....	30
Switching Camera and Smart Device Index Playback .....	31
Introduction of Icons in the Playback Mode.....	32
Single Playback .....	32
Index Playback.....	34
Description of Functions in Playback Mode .....	35
Gestures in Playback Mode.....	35
Rotate  (Smart Device Single Playback Mode) .....	35

Select One or More File(s) (Camera and Smart Device Index Playback Mode).....	36
Download  (Camera Single Playback and Index Playback Mode).....	39
Image Stabilization (Az intelligens eszköz egyszeri lejátszás mód) .....	40
Editing Video Files  (Smart Device Single Playback Mode).....	41
Sharing  .....	48
Delete  .....	54
Playing Videos (Camera and Smart Device Single Playback Mode) .....	55
VR / Global Photos Playback (Camera and Smart Device Single Playback Mode).....	56
VR Cardboard  (VR Glasses Playback).....	57
Menu  (Camera and Smart Device Index Playback Mode).....	60

# Connecting the Camera with your Smart Device

---

## > Downloading and Installing the APP

Please download the APP installation package  (APP Name: PIXPRO 360 VR Remote Viewer) to your Smart Device from the path below and install it.

### ■ **ANDROID System**

For ANDROID devices, search and download the "PIXPRO 360 VR Remote Viewer" APP in Google Play and install it following the instructions on the interface.



<https://play.google.com/store/apps/details?id=com.pixpro.vr360>

### ■ **iOS System**

For APPLE devices, search and download the "PIXPRO 360 VR Remote Viewer" APP in the iTunes APP store and install it following the instructions on the interface.





<https://itunes.apple.com/us/app/pixpro-360-vr-remote-viewer/id1225087897>

After successful installation, this icon  will appear on your Smart Device's screen.


## > Establishing Connection

### >1 Wi-Fi Connections (iOS and ANDROID Systems)

1. Camera: Check the SSID (PIXPRO-ORBIT360\_XXXX / PIXPRO-4KVR360\_KXXXX) as indicated on the label inside the battery compartment of the camera. In the main interface, press the  button to switch to Wi-Fi® mode and this camera's eight-digit random Wi-Fi® password will be displayed on the LCD screen.

 If "-----" is displayed on the LCD screen, it indicates that this Wi-Fi® password included with letters, it should be resetted. You can regenerate a new eight-digit random password through the reset function of the camera. For more details, please refer to the user manual of the camera.

2. Smart Device: Enable Wi-Fi mode, the Smart Device will automatically search nearby Wi-Fi hotspots. Select the camera's SSID (PIXPRO-ORBIT360\_XXXX / PIXPRO-4KVR360\_KXXXX) and input the password.


 To optimize Wi-Fi performance, please close other unnecessary programs running on your Smart Device.

### >2 NFC Connection (ANDROID System)


1. Enable NFC mode on your Smart Device.

2. Use your Smart Device to lightly touch the NFC mark on the camera; if the Smart Device has a prompt tone or vibration, it means the connection is successful.

3. The APP should automatically open on your Smart Device.

 The NFC feature will only be available when your Smart Device's screen is unlocked.

 When using NFC connection, no matter whether the BLUETOOTH function is supported on the Smart Device, only Wi-Fi connection is established.


 
 
 Android 10 OS Limit: It is not recommended to use the NFC tag for Portable Wi-Fi connections as it may cause abnormal connection.



# Operation Methods

 
## > Remote Viewfinder

### >1 Remote Viewfinder Interface

 
 On the Remote Viewfinder Interface, tap the  icon to hide information, and tap  to restore initial display.



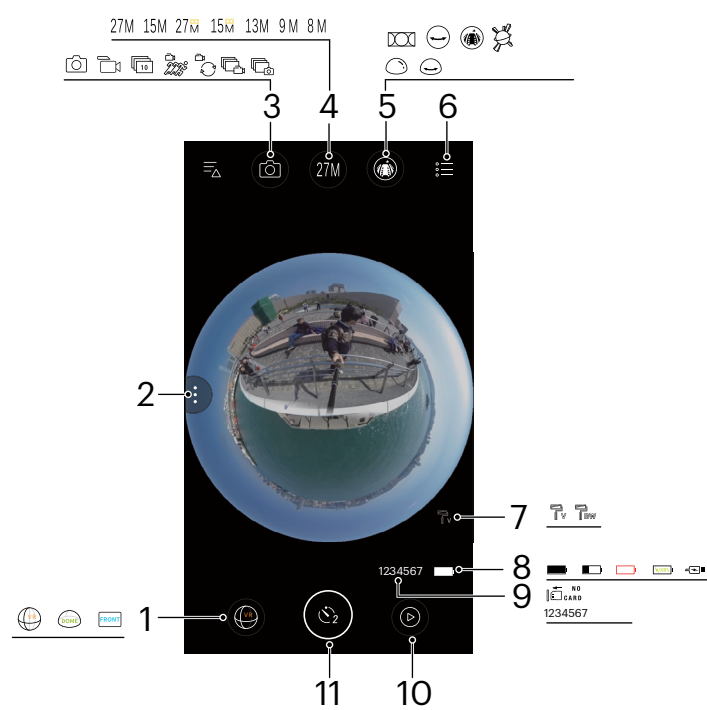


## Shooting Interface



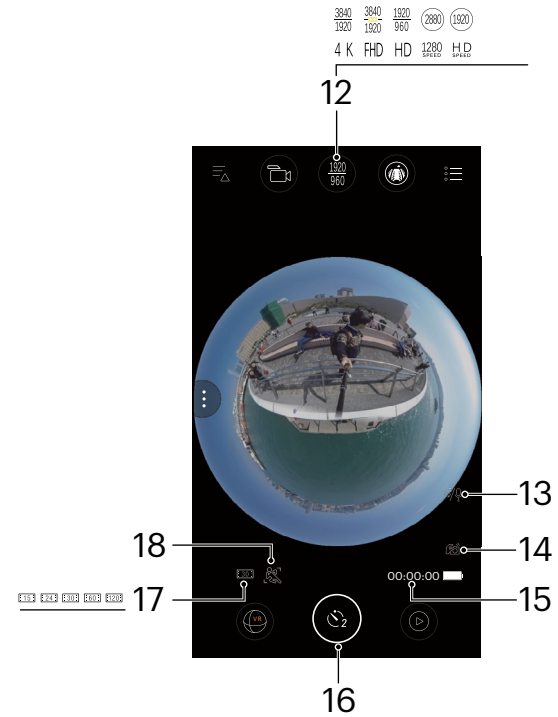

## Video Interface



1	Camera Mode	7	Color Effects	11	Shutter	16	Start Video Recording  / Stop Video Recording 
2	Function Menu	8	Battery State	12	Movie Size		
3	Shooting Mode	9	Number of Photos that Can be Taken/ No Memory Card in the Camera	13	Wind Cut	17	Frame Rate
4	Image Size			14	Electronic Image Stabilizer (EIS)	18	Motion Detection
5	Unfold Mode			10	Playback	15	Recordable Video Time
6	Menu						

 
 If no microSD card is in the camera, recording or taking photos is not possible.

 The camera is preset to shoot via the 2s () self-timer mode.

## >2 Parameter Settings

### Shooting Mode

Tap the Shooting Mode icon to enter the Mode Selection screen. Tap any of the options to confirm your selection.

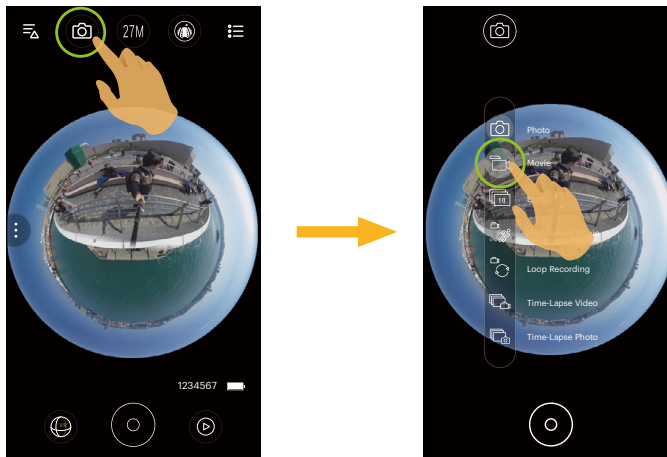

#### **Photo** **Mode**

Enables photo shooting.

#### **Video** **Mode**

Enables video recording.






### **Burst Mode**

Automatically stops after 10 photos are shot at a time (the shutter is pressed down and not held down).

### **High Speed Video Mode**

This camera shoots ultra high speed movies and plays back with normal 30fps speed.

-  The video is not capable of recording audio and does not support Electronic Image Stabilization (EIS).
-  High Speed Video shooting can not be used in the 235° - Dome Mode (  ) setting.


### **Loop Recording Mode**

Loop Recording refers to recording independent video segments in the unit of 2 minutes. The recording will be automatically stopped if the single recording time exceeds 24 hours.

-  A new folder is created for every Loop Recording.

### **Time-Lapse Video Mode**

Time-Lapse Video enables the recording of an interval of time, and splices the frames together to present a condensed video, which usually requires a long period to complete.

 
-  The video is not capable of recording voice and does not support Electronic Image Stabilization (EIS).

### **Time-Lapse Photo Mode**






Photos are continuously shot at preset time intervals (1 sec. / 2 sec. / 5 sec. / 10 sec. / 30 sec. / 60 sec.).
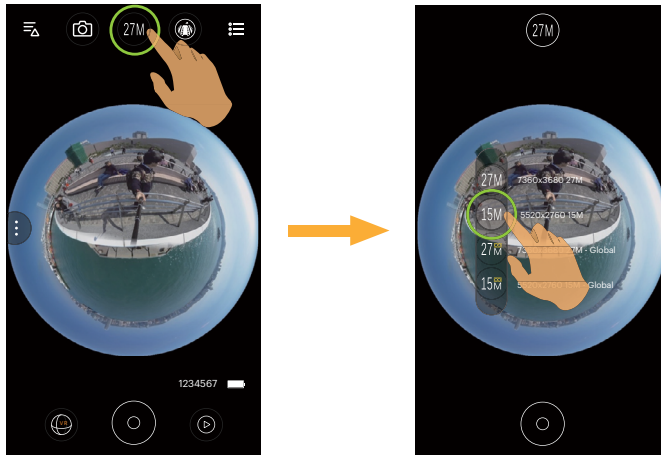
## Image Size

Setting photo resolution sizes.

 


There are 7 options:

Type	Icon	Image Size
	27M	7360 x 3680 27M
	15M	5520 x 2760 15M
	27M 	7360 x 3680 27M - Global
	15M 	5520 x 2760 15M - Global
	13M	3680 x 3680 13M 1:1
	9 M	3526 x 2644 9M 4:3
	8 M	3840 x 2160 8M 16:9

## Movie Size

Setting video resolution.

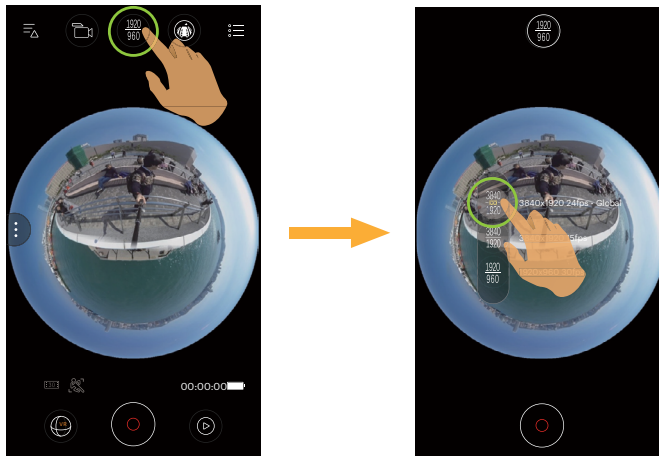

 
There are 10 options:





 



Type	Icon	Movie Size	Supported Recording Mode	Type	Icon	Movie Size	Supported Recording Mode
VR		3840 x 1920 24fps - Global		FRONT	4 K	3840 x 2160 30fps	
		3840 x 1920 15fps			FHD	1920 x 1080 60fps	
		1920 x 960 30fps			HD	1280 x 720 60fps	
		1280 x 640 120fps			HD SPEED	1280 x 720 120fps	
DOME		2880 x 2880 24fps					
		1920 x 1920 30fps					

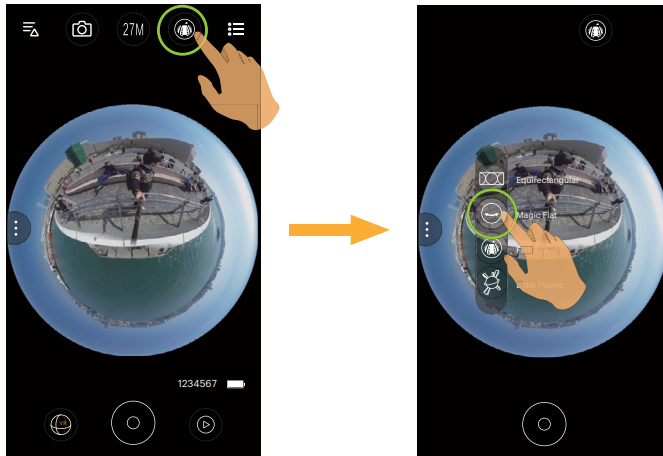When recording in higher pixel resolutions for extended periods of time, the camera may get warm. This is not a camera malfunction. If this happens, please power off until the camera body temperature is cooled and then resume using.

## Unfold Mode

Select from several different viewing modes.

 


Type	Icon	Mode	Operating Methods (Using Smart Devices touch screen)
		Equirectangular	This function is not touch supported
		Magic Flat	Move up/down, move to the left/right
		Fish Eye	Slide up and down to preview the vertical direction; slide left and right to preview the horizontal direction
		Little Planet	By sliding up and down/left and right, the effect of Little Planet can be viewed
		Dome	Flip up/down, move to the left/right
		Magic Flat	Move up/down, move to the left/right




 In 197° Ultra Wide 4K - Front Mode FRONT, this function is not supported.

## Camera Modes

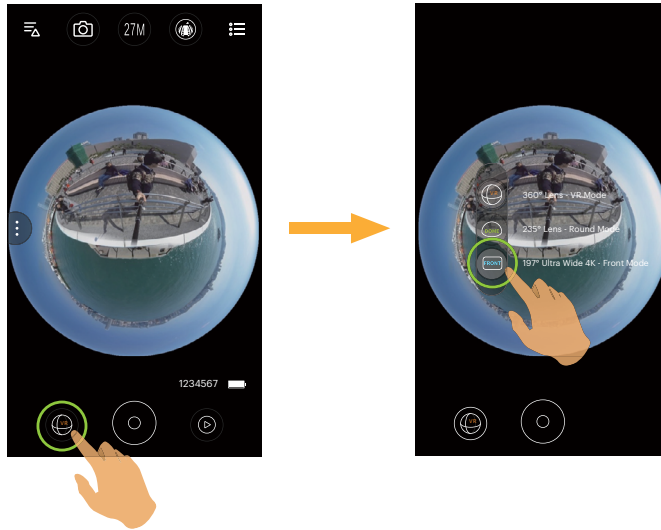You may select different Camera Modes to shoot still photos or videos.




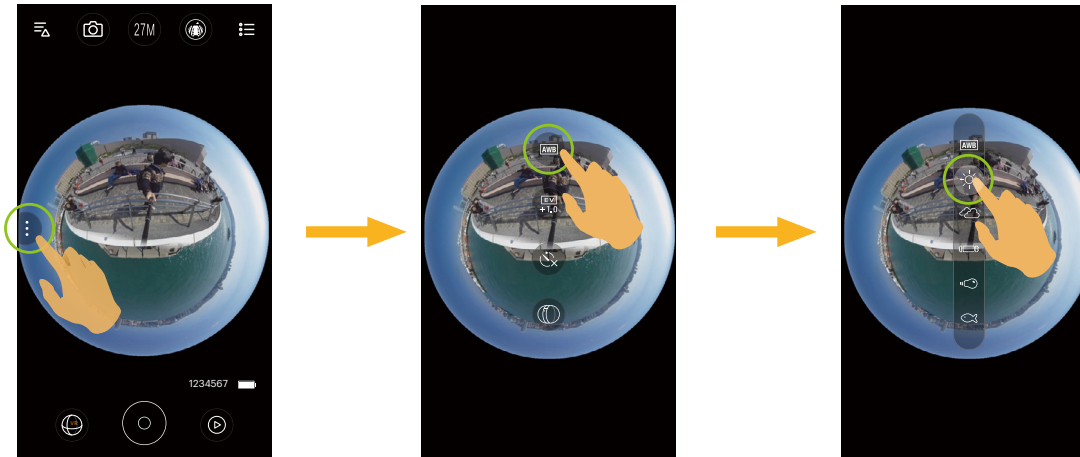 
There are 3 options:

-  360° Lens - VR Mode
-  235° Lens - Dome Mode
-  197° Ultra Wide 4K - Front Mode

 In different Camera Modes, the corresponding photo / video file sizes and display methods may be different.

## Function Menu







Tap  or slide from the left to the right of the screen to display the function menu. Tap the Menu Items to be set to enter the Item Options screen. Tap Options to return to the Menu screen. Tap the non-selection area of the interface to access the Remote Viewfinder screen.



## White Balance

The White Balance function allows the user to adjust color temperatures under different light sources, to allow individual color selections and more flexibility in different lighting and environments.

 
There are 6 options:

-  AWB
-  Daylight
-  Cloudy
-  Fluorescent
-  Incandescent
-  Underwater

## EV Settings

Adjusting the brightness of the framing interface. This setting can be applied where the contrast of the subject shot and background brightness are vastly different.

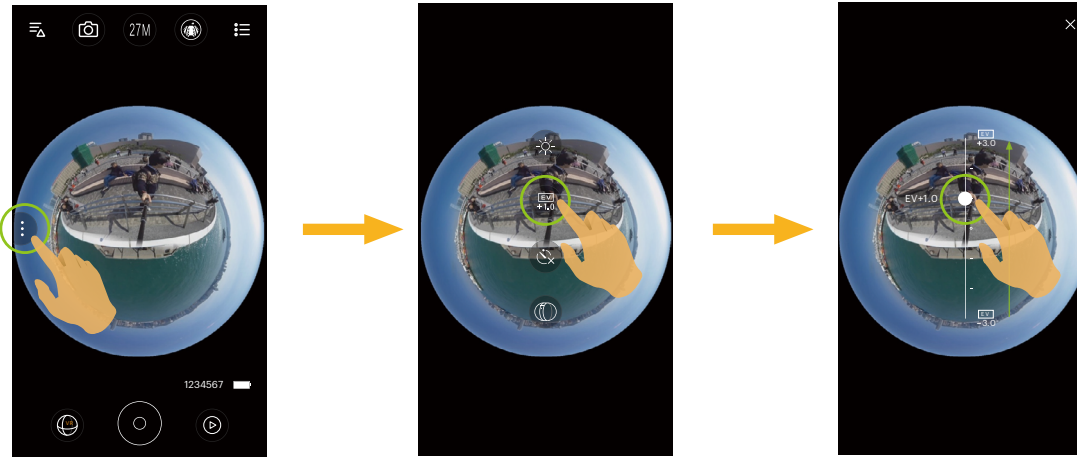


EV value can be adjusted by sliding your finger up and down.



## Self Timer

 
Shooting with a predetermined timer is achieved using this function.

There are 3 options:


-  Self Timer - Off
-  Self Timer - 2 sec.
-  Self Timer - 10 sec.

## Viewing Modes

Select the icon according to the direction that the camera lens is facing, so the image will be displayed in the upright direction.

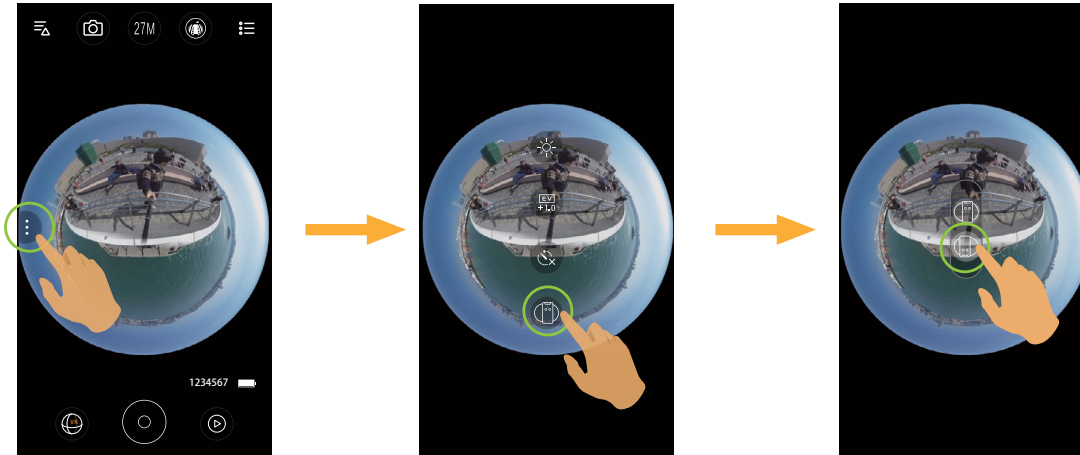



Type	Icon	Mode	Description
		LCD (Up)	Means the image will be displayed upright when the LCD is facing upward.
		LCD (Down)	Means the image will be displayed upright when the LCD is facing downward.
		Front Lens (Up)	Means the image will be displayed upright when the Front Lens is facing upward.
		Front Lens (Down)	Means the image will be displayed upright when the Front Lens is facing downward.
		LCD (Up)	Means the image will be displayed upright when the LCD is facing upward.
		LCD (Down)	Means the image will be displayed upright when the LCD is facing downward.
		Lens Up	Means the image will be displayed upright when the 235° Lens is facing upward.
		Lens Down	Means the image will be displayed upright when the 235° lens is facing downward.

 
 In 197° Ultra Wide 4K - Front Mode **FRONT** will not be supported.



## Field of View

Field of View sets the desired viewing angle.

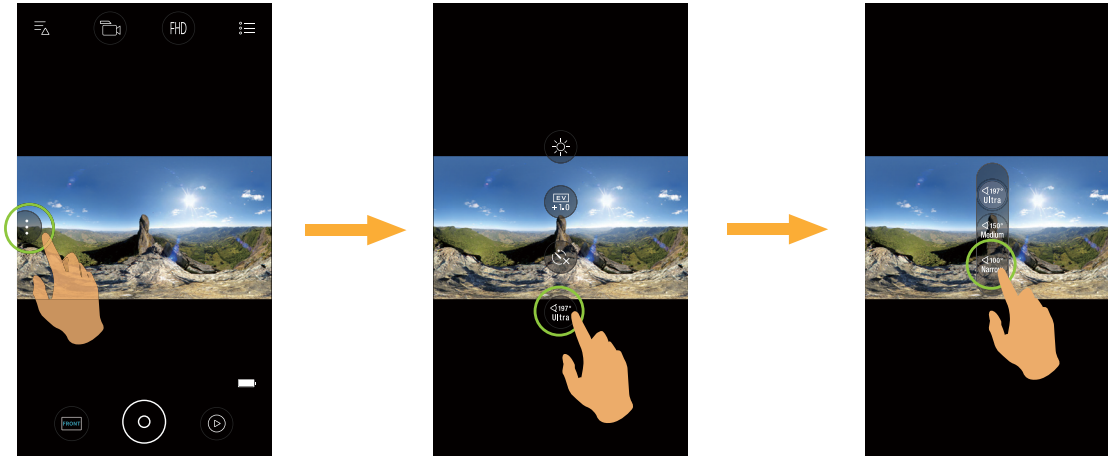 


 
This function is only available when selecting FHD video size in the Front Mode setting ( FRONT ) while recording (  /  ).

 




There are 3 options:

	<b>Ultra Wide</b>	<b>Middle</b>	<b>Narrow</b>
EIS ( On ) 	◁171° Ultra	◁136° Medium	◁ 91° Narrow
EIS ( Off ) <b>EIS OFF</b>	◁197° Ultra	◁150° Medium	◁100° Narrow

# Menu

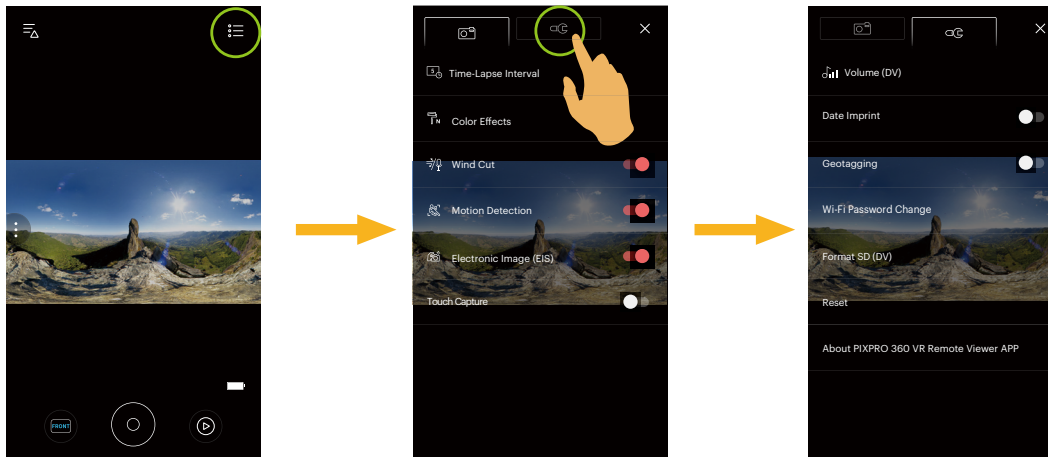1. Tap  to display the Menu Icon.
2. Tap  or  to switch between different settings.
3. Tap the Menu Items to be set to enter the Item Options screen. Tap Options to return to the Menu screen. Tap  to return to the Remote Viewfinder screen.









First Level Menu	Shooting Settings 		General Settings 
	Photo Settings	Video Settings	
Second Level Menu	Time-Lapse Interval	Time-Lapse Interval	Volume (DV)
	Color Effects	Color Effects	Date Imprint
	Touch Capture	Wind Cut	Geotagging
		Motion Detection	Wi-Fi Password Change
		Electronic Image (EIS)	Format SD (DV)
			Reset
			About PIXPRO 360 VR Remote Viewer APP


## Shooting Settings




### Time-Lapse Interval

Set the time interval of recording videos or taking pictures.

There are 6 options:

-  1 sec.
-  2 sec.
-  5 sec.
-  10 sec.
-  30 sec.
-  60 sec.

 Interval 1 second cannot be set in VR mode.

 The function is supported only in the modes  and .

### Color Effects

Set the color effects of photos and videos.


 
There are 3 options:

-  Normal
-  Vivid
-  Black & White

### Wind Cut

Wind cut refers to the reduction of noise caused by wind.



There are 2 options:

-  Off
-  On

### Motion Detection

Motion detection means that if the product detects moving objects entering into the camera's LCD screen, it will automatically start recording. During the recording process, if there is no moving object detected for 10 continuous seconds, the recording will automatically be paused.



There are 2 options:



-  Off
-  On



## Electronic Image Stabilizer (EIS)

Set the Electronic Image Stabilization modes.

There are 2 options:

-  Off
-  On

 When selecting (  ) mode, this option will not appear and EIS is automatically disabled and not available by default.

 The Dome (  ) and Front (  ) modes in Recording mode (  /  ) are available for selection.

## Touch Capture (Only in still image/photo mode)

Tap the Smart Device screen to shoot within range.

There are 2 options:

 



- On
- Off

## General Settings

### Volume (DV)

Setting the audio volume of the camera.

There are 4 options:


-  Mute
-  Level Three
-  Level Two
-  Level One

### Date Imprint

Include a Date/Time stamp on the photo image.

There are 2 options:

- On
- Off


 Only static picture of 9 M and 8 M support this function.

### Geotagging

Photos will be tagged with the geographic location where they are taken.

There are 2 options:

- On
- Off

 When this function is set as disabled, whether GPS is enabled or not on the Smart Device, the APP will not read the GPS information from the Smart Device.

## Wi-Fi Password Change

To change the Wi-Fi connection password.

Enter the old password following the screen prompts then enter your new password twice. Finally Tap [Update].

 


If you forget the Wi-Fi® connection password, you can use the reset function on the camera to reset a new random digital password. Please refer to the camera manual for details on resetting.

 


Please enter the new password on your Smart Device after changing your Wi-Fi password. Some models of Smart Devices will remember the Wi-Fi password previously entered. Please clear the old password on your Smart Device manually before reconnecting (For different models, this operation may vary, please refer to your Smart Device's user manual).

### iOS System

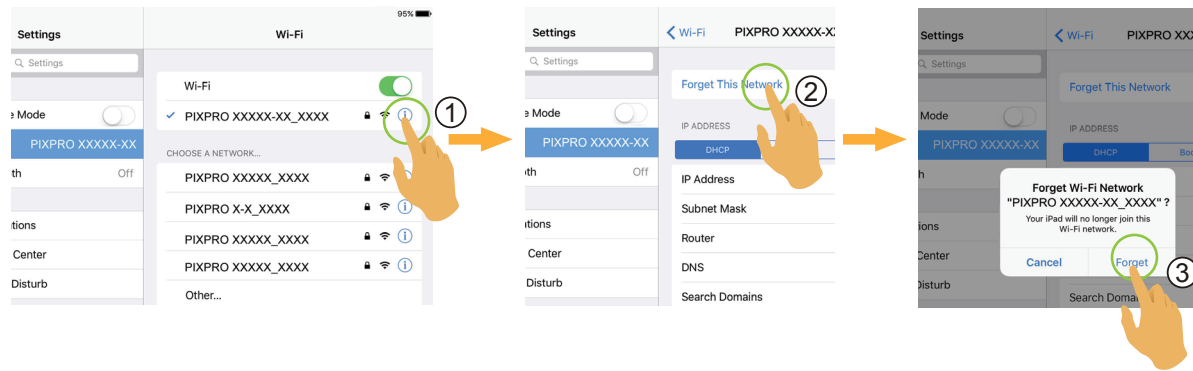

### ANDROID System

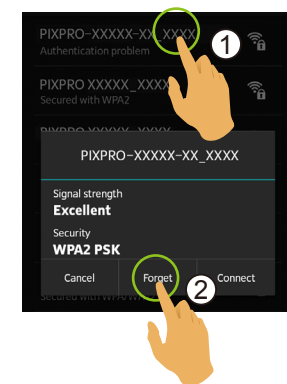

## Format SD Card (DSC)

To clear all data stored on the memory card.

There are 2 options:

- FORMAT
- CANCEL

## Reset

Reset settings (except for Date and Time, Wireless APP point, SSID and Password ) you can recover all initial product settings to the factory defaults.

There are 2 options:

- RESET
- CANCEL













After resetting, the camera will automatically power off.

## About PIXPRO 360 VR Remote Viewer APP

- View the current version of the APP.
- View the firmware version of the camera while in the APP connection status.
- Tap the official [kodakpixpro.com](http://kodakpixpro.com) website on the interface and you can go to the website for more information.

Menu can be adjusted in each Mode: ( O: Optional X: Not Optional )

Menu \ Mode		Mode						
								
Camera Mode		O	O	O	O	O	O	O
		O	O	O	X	O	O	O
		O	O	O	O	O	O	O
EV Value		O	O	O	O	O	O	O
White Balance		O	O	O	O	O	O	O
Unfold Mode		O	O	O	O	O	O	O
Viewing Mode		O	O	O	O	O	O	O
Image Size		O	X	O	X	X	X	O
Movie Size		X	O	X	O	O	O	X
Field of View		X	O	X	X	O	O	X
Motion Detection		X	O	X	X	X	X	X
Electronic Image Stabilizer(EIS)		X	O	X	X	O	X	X
Time-Lapse Interval		X	X	X	X	X	O	O
Color Effects		O	O	O	X	X	X	X
Wind Cut		X	O	X	X	O	X	X
Touch Capture		O	X	O	X	X	X	X
Volume (DV)		O	O	O	O	O	O	O
Date Imprint		O*1	X	O*1	X	X	X	O*1
Geotagging		O	X	O	X	X	X	O
Wi-Fi Password Change		O	O	O	O	O	O	O

\*1 Only static picture of 9 M and 8 M support this function.




Functions that can be enabled are different under each mode.

 


## >3 Shooting Methods


- 📄 All files are saved on the microSD memory card in the camera.
- 📄 Select **FRONT** and the stored video or photo files will be rectangle; select **DOME** and the stored video or photo files will be global; select **VR** and the stored video or photo files are 2:1 Global with 2:1 Stitched.



### Shooting

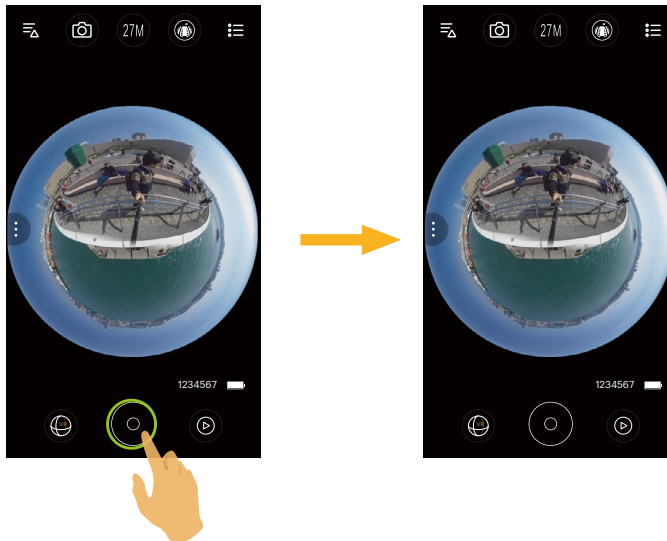1. Align the camera lens with the shooting subject and confirm viewing through the screen of your Smart Device.
2. Tap the icons on the Interface to set the corresponding parameters.
3. Tap  to take a still photo.






## Video Recording

Tap the Shooting Mode Icon on the Shooting screen to enter the Mode Selection screen and tap  to enter the Video Recording screen.

1. Tap the icons on the interface to set the corresponding parameters.
2. Tap  to start recording and then tap  to stop recording.






 Tap  while recording to disconnect Wi-Fi; click "OK" on the prompt screen to close the APP and click "Cancel" to cancel and return to the recording screen.

 Video size of 3840 x 1920 15 fps, 1920 x 960 30fps and 1280x640 120fps will display a black screen during recording.

 
# > Playback

There are two Playback Modes: • Single Playback (video / photo);  
• Index Playback (camera / smart device).

 
## >1 Switching of the Remote Viewfinder Mode and Playback Mode

1. Tap  to enter the camera's Single Playback Interface.
2. Tap  to enter the Index Playback Interface.
3. Tap any small icon to enter the Single Playback Interface.
4. Tap  to enter the Remote Viewfinder Interface.

 
Remote Viewfinder Interface

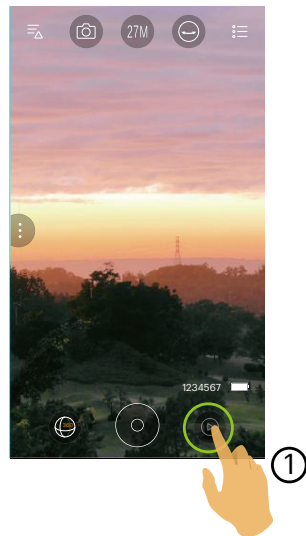

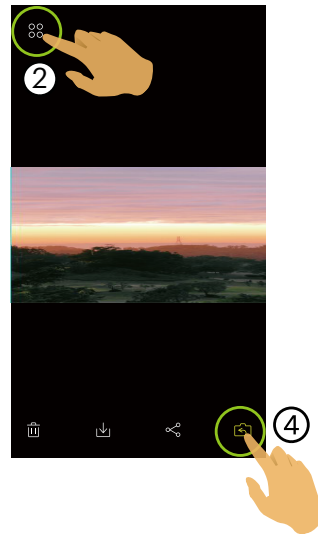

Single Playback Interface

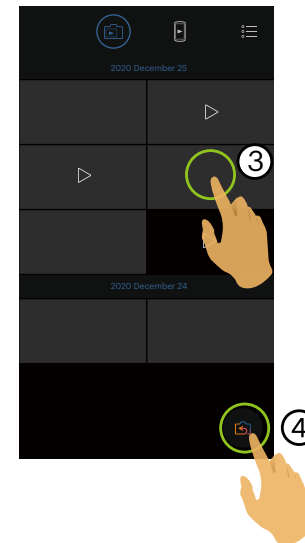

 
Index Playback Interface



 
## >2 Switching Camera and Smart Device Index Playback

1. On the camera Index Playback Interface, tap  to enter into the Smart Device Index Playback Interface.
2. On the Smart Device Index Playback Interface, tap  to enter into the camera Index Playback Interface.

Camera Index Playback Interface      Smart Device Index Playback Interface

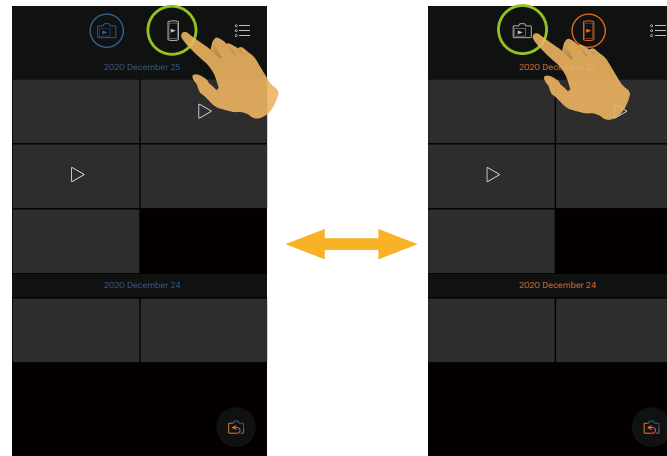

1. On the Smart Device Index Playback Interface, tap the thumbnail to enter into the Smart Device Single Playback Interface.
2. On the Camera Index Playback Interface, tap the thumbnail to enter into the camera's Single Playback Interface.

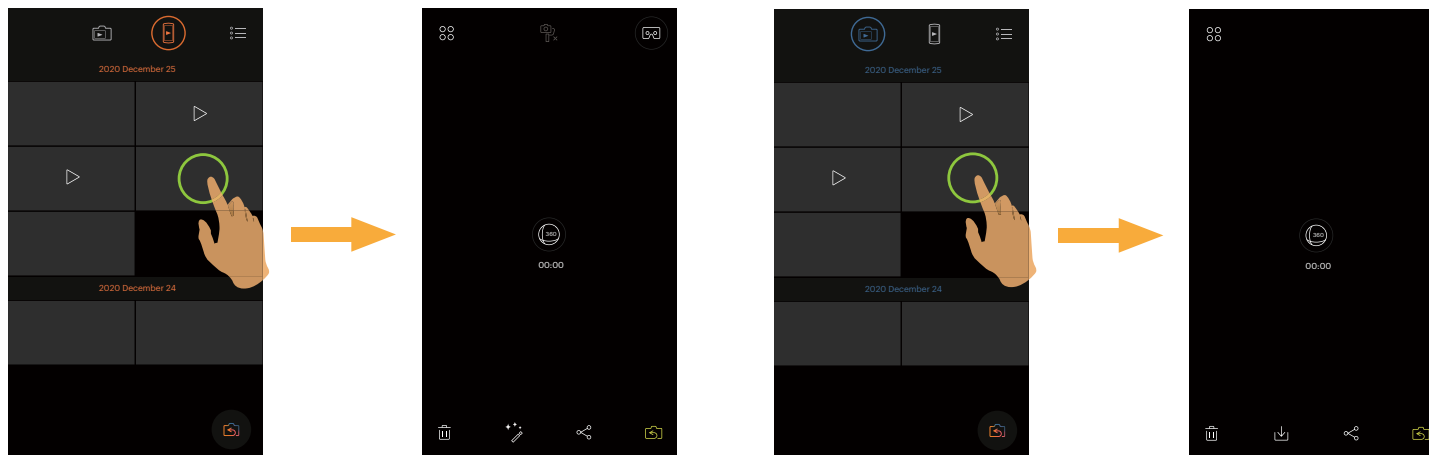

## >3 Introduction of Icons in the Playback Mode

 
### Single Playback







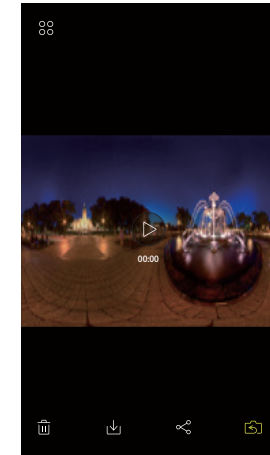


 


#### Camera

Photo



Video



 
 Enter Index Playback screen	 Enter photo or video mode
 Share the current photo or video to social networks	 Download the current photo or video to the Smart Device
 Delete the current photo or video	 Rotate the photo
 Play the video (Front file)	 Unfold file playback
 Output	 Return to the previous interface
 VR ( Only for Smart Device Single Playback Mode )	 Editing ( Only for Smart Device Single Playback Mode )









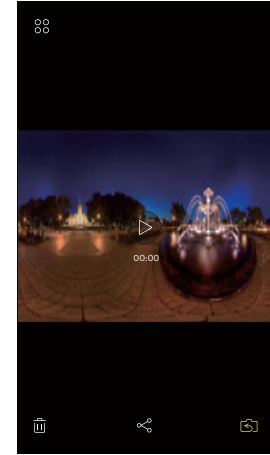





## Smart Device




Photo




Video

 


 LCD (Up)	 LCD (Down)
 Front Lens (Up)	 Front Lens (Down)
 LCD (Up)	 LCD (Down)
 Lens Up	 Lens Down
 Magic Flat	 Equirectangular
 Fish Eye	 Little Planet
 Dome	 Magic Flat

 
 For synthesized photos and videos, there are only two options  and  while selecting viewing mode.

 




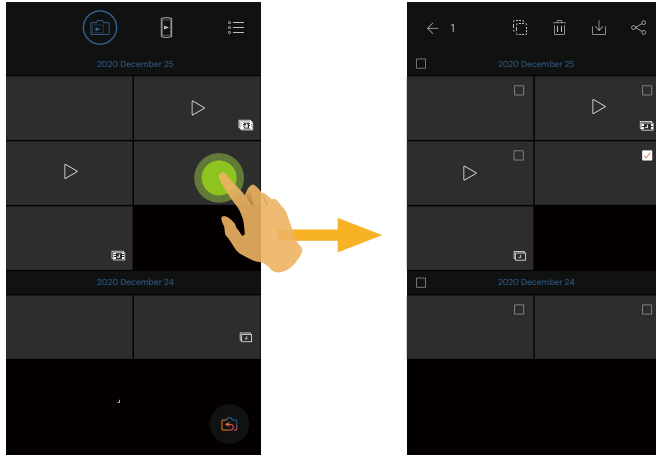

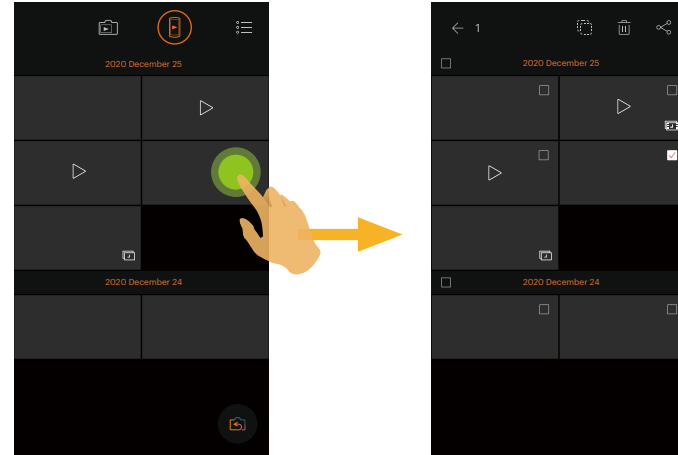


# Index Playback

Camera 



Smart Device 



 Menu	 Return to the previous interface
 Enter photo or video mode	 To select all files
 Select multiple files to share	 Enter the download mode to move the files in the camera into the Smart Devices
 Select multiple files to delete	 Video files
 Time-lapse Photo files	 Time-lapse Video files

## >4 Description of Functions in Playback Mode

 
### Gestures in Playback Mode

1. Hide/display the icons: Tap the photo or video once with a single finger.
2. Zoom in (except for front video): Quickly tap the photo or video twice or use two fingers to expand the photo or video.  
Zoom out (except for front video): Quickly tap the photo or video twice and it will restore the photo or video to its original size. Use two fingers and pinch to reduce the photo or video.
3. Browse fore and aft files: Slide left/right moving one finger on screen.
4. Move the photo: Slide a finger to move the photo around.

### Rotate (Smart Device Single Playback Mode)

Rotate the photo by 90° (Only in Front photo Mode).

 
Tapping  the photo will rotate 90° counter-clockwise each time this icon is pressed.

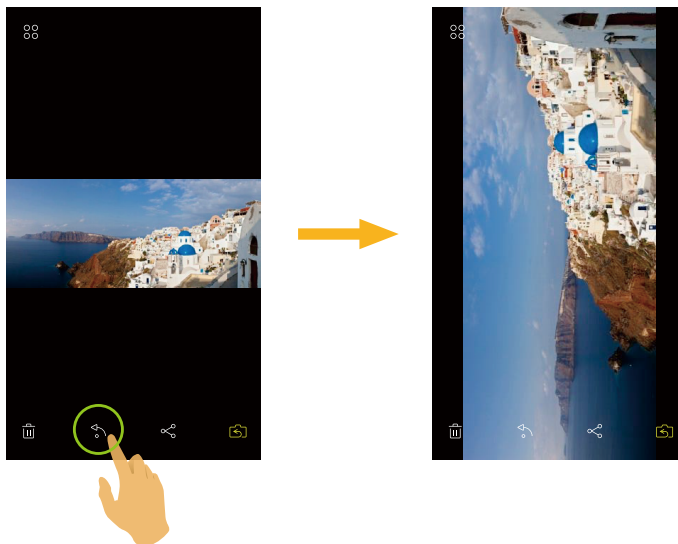

 


## **Select One or More File(s)** (Camera and Smart Device Index Playback Mode)

1. Hold down a file thumbnail to enter into the Multiple Selection Screen.

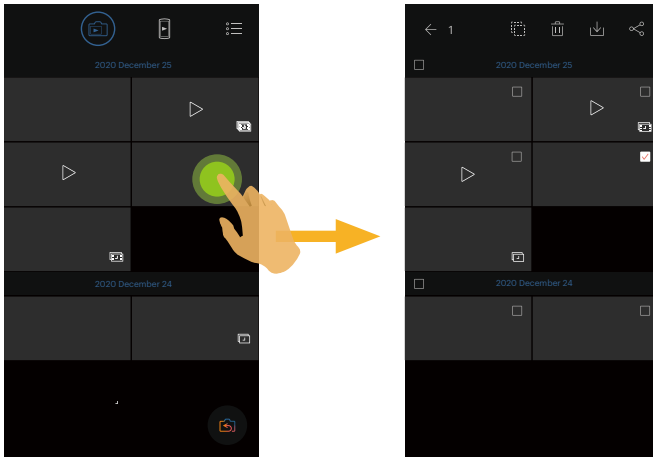 


2. View fore and aft files by sliding your finger up and down on the screen.

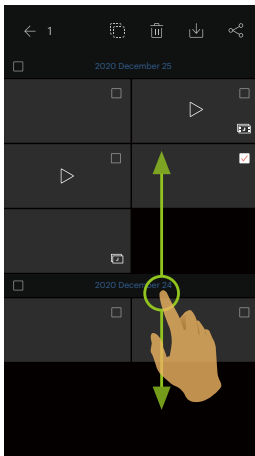 




3. Select one or more file(s).

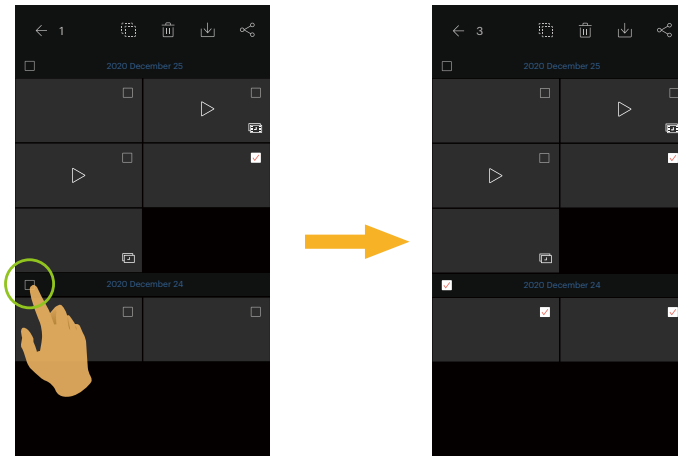 
3.1. Tap  before the date folder to select all files under the date folder:

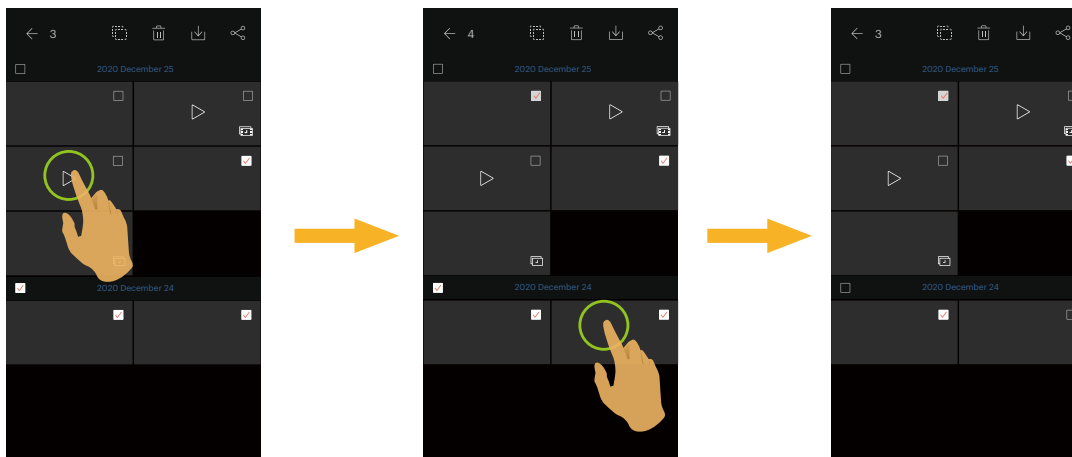

3.2. Tap a file thumbnail to select a single file (tap again to cancel the selection):




3.3. Tap  to select all files; tap  to cancel the selections and return to the Index Playback Interface.

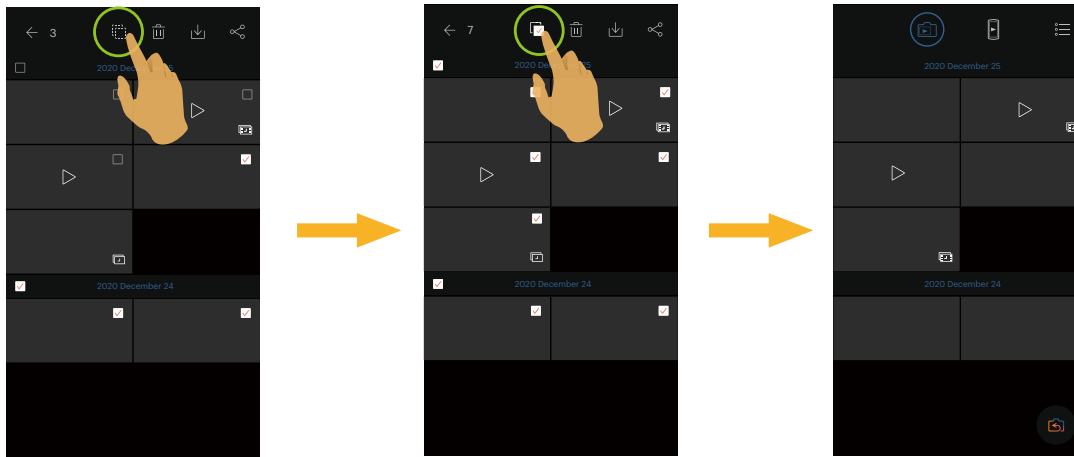 


## **Download** (Camera Single Playback and Index Playback Mode)


Download the photos or video in the camera to your Smart Device.

### **Camera Single Playback Mode:**

1. Select the file you want to download and tap  to start downloading.
2. Tap [Download Later] in the downloading process to cancel downloading.
3. After downloading is complete, return to the Playback Interface Screen.

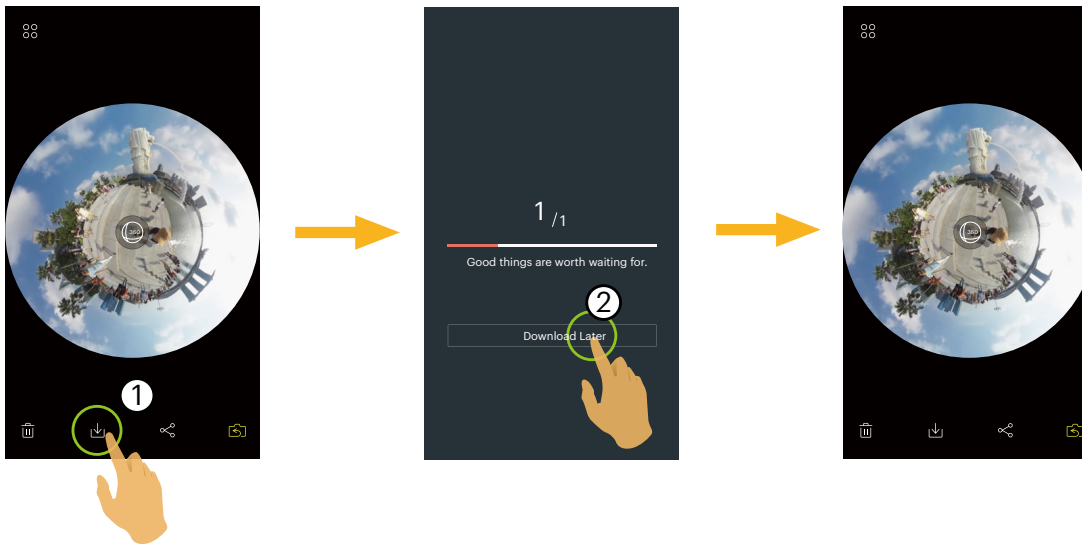

 
### **Camera Index Playback Mode:**

1. Select one or more file(s) you want to download and tap  to start downloading.
2. Tap [Download Later] in the downloading process to cancel downloading.
3. After downloading is complete, return to the Playback Interface Screen.



## Image Stabilization (Az intelligens eszköz egyszeri lejtászás mód)

Even if the camera is tilted vertically (pitch direction) and horizontally (roll direction) during shooting, this function will help keep the image horizontal, improve image stabilization, reduce handshaking and help to view a smooth movie during playback.

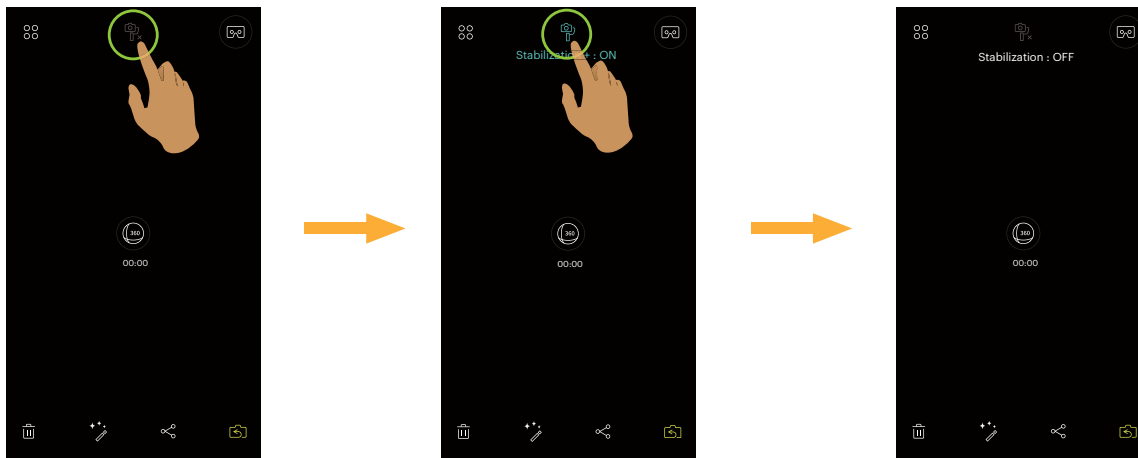This function is only available for images shot in VR Mode.



 
There are 2 options:

-  Stabilization + : ON
-  Stabilization : OFF

# Editing Video Files ✨ (Smart Device Single Playback Mode)


 
 



 
 
You may crop videos downloaded to your Smart Device.

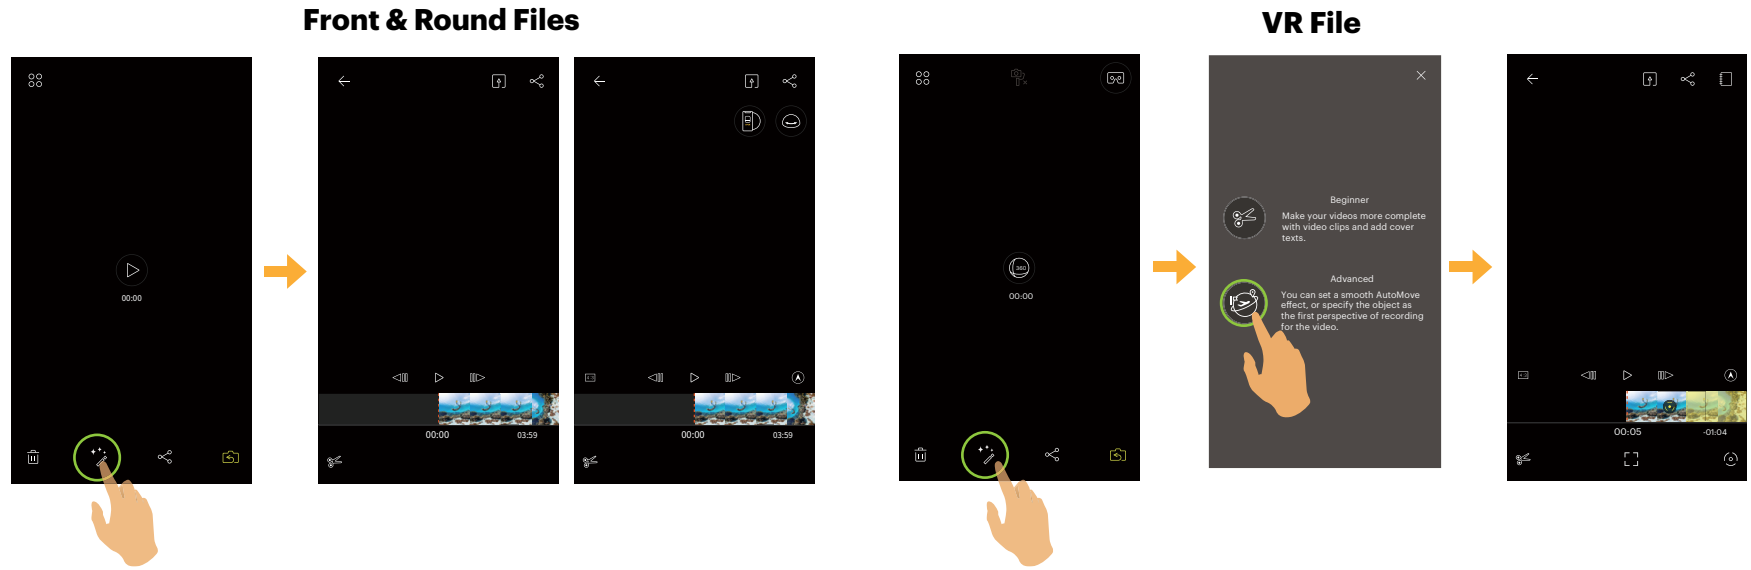 
## Edit screen icon introduction:



Beginner	Advanced	Sub-menu	Ratio of Shooting Pixels
Previous Frame	Play	Frame Forward	Visual Angle
Trim	Target Tracking	AutoMove	Operation Prompt
Start Time	End Time	Trim start point	Trim end point
Angle zoom bar	Centerline	Delete confirmation	Exit editing

 
## Trimming Video:

1. In the Beginner editing interface, tap  to enter the trim interface.
2. Slide the thumbnail of the movie on the time axis bar so that the centerline  stays on thumbnails needing to be trimmed, and tap  to select the cropping start point, simultaneously shown  on the time axis bar.
3. Slide the thumbnail of the movie on the time axis bar so that the centerline  stays on thumbnails needing to be trimmed, and tap  to select the cropping end point, simultaneously shown  on the time axis bar.
4. Tap [Done] to confirm.
5. Tap  to export newly created files.

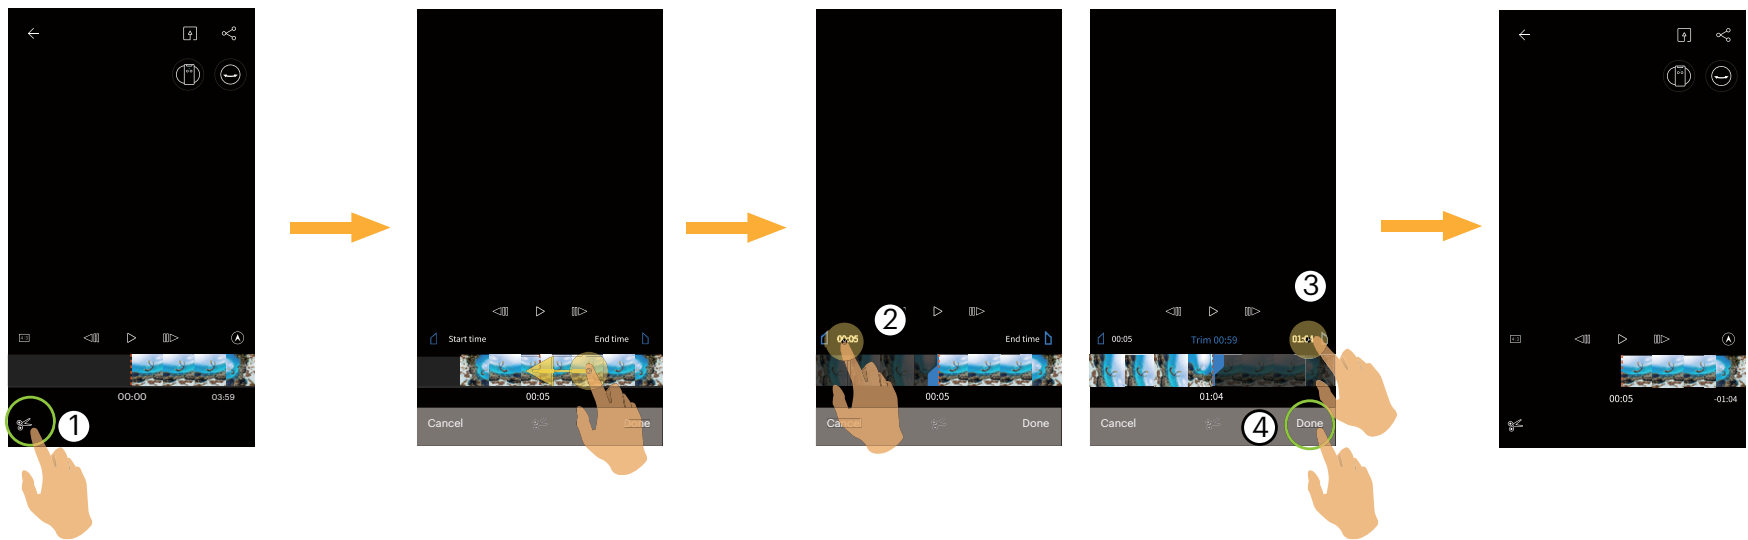

 
## Unfold Mode

Select from several different viewing modes.

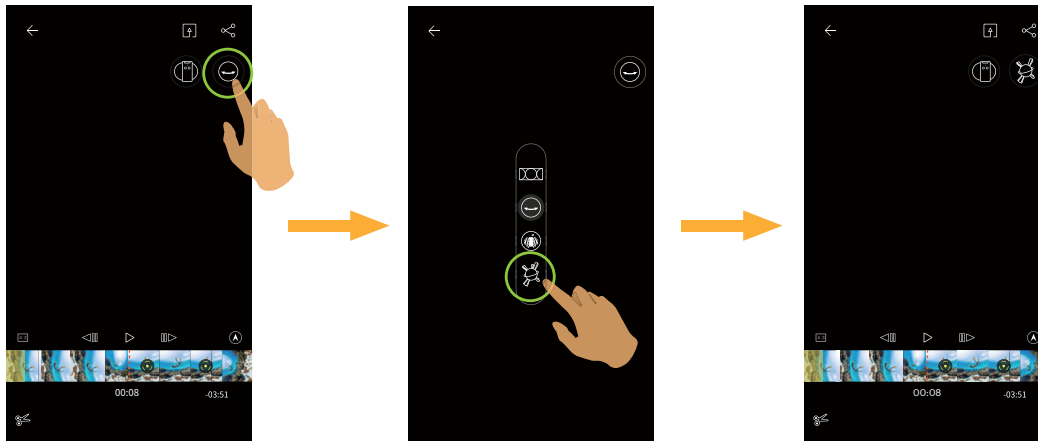

## Viewing Modes

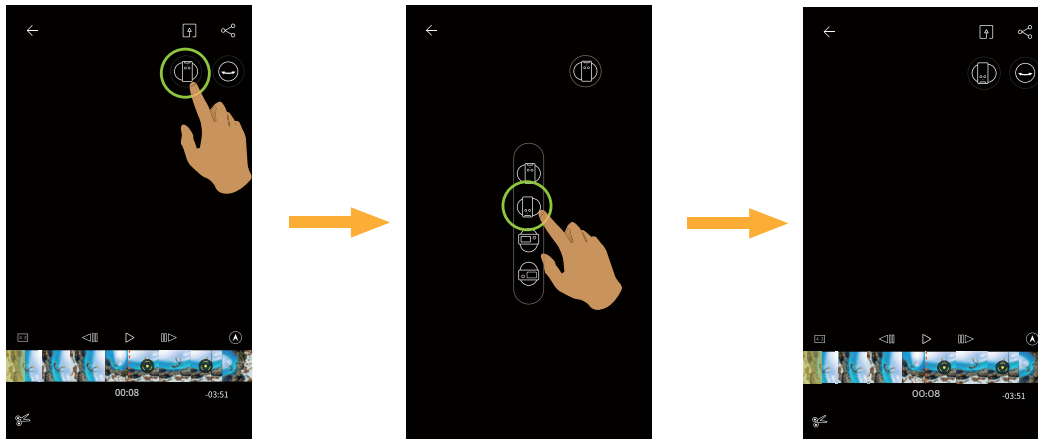

Select the icon according to the direction that the camera lens is facing, so the image will be displayed in the upright direction.

 




## Play the Cropped Video

 



Playing back cropped video.

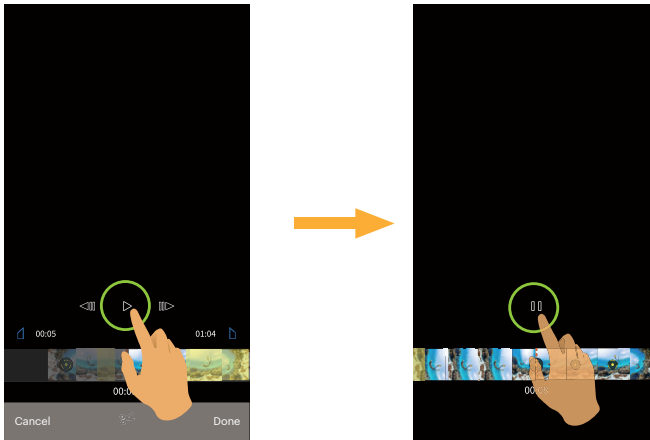 
Tap  to play video and tap  to stop playing and return to the first frame of the cropped segment.





## Target Tracking

You can complete video editing on a panoramic video by using the target tracking function with the first-perspective object as the subject of the video.

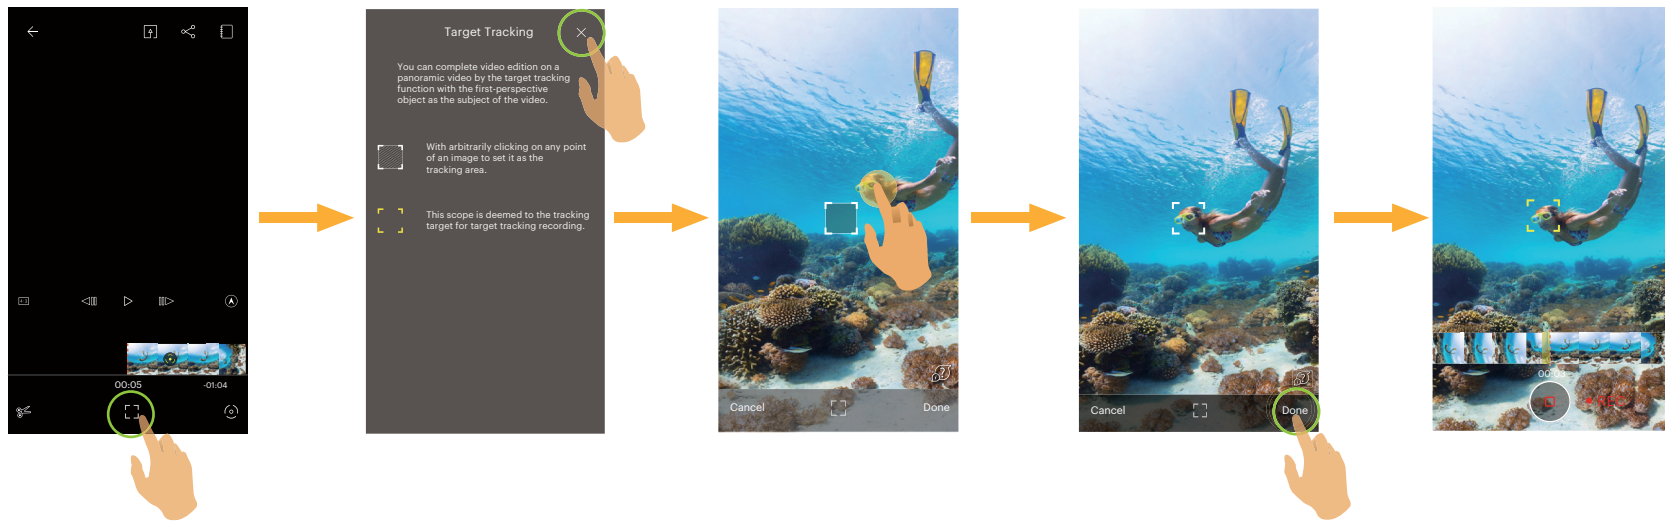
 

1. In the advanced editing interface, tap  to enter the target tracking operation prompt interface.
2. Tap  to close the operation prompt.
3. Tap the target you want to track, tap [Done] to track the target with a tracking marker.
4. Tap  to stop target tracking.
5. Tap  to export newly created files.

 


 When the operation prompt is closed, tap  to resume display.

 
## AutoMove

 
With arbitrarily clicking on the center points of two screens, it will automatically connect two editing marks, simulating a perfectly smooth video-like shot.

1. In the advanced editing interface, tap  to enter the AutoMove operation prompt interface.
2. Tap  to close the operation prompt.
3. Gesture zoom image to change the movie view.
4. The gesture swipe changes the position of the frame and selects the target point.
5. Tap [Done] to set the target point of the AutoMove, repeat the previous steps to set another target point.
6. Tap  to export newly created files.

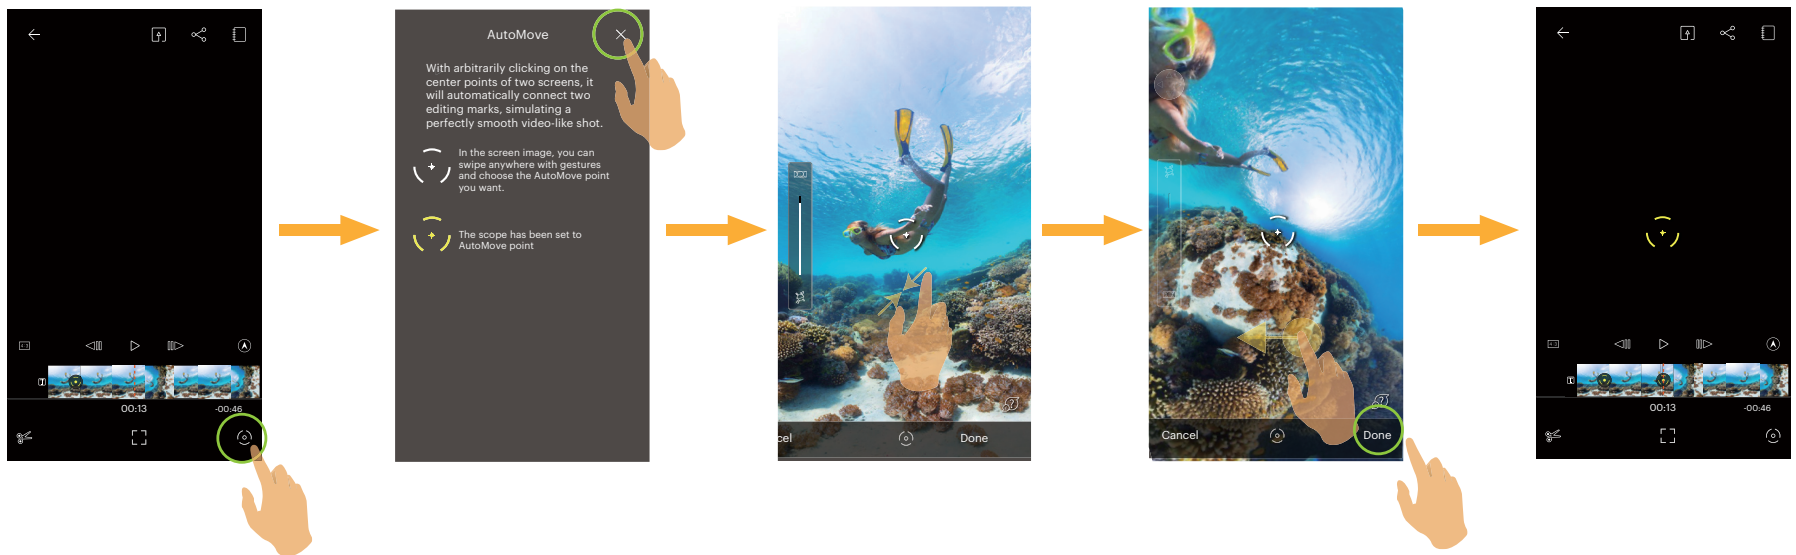


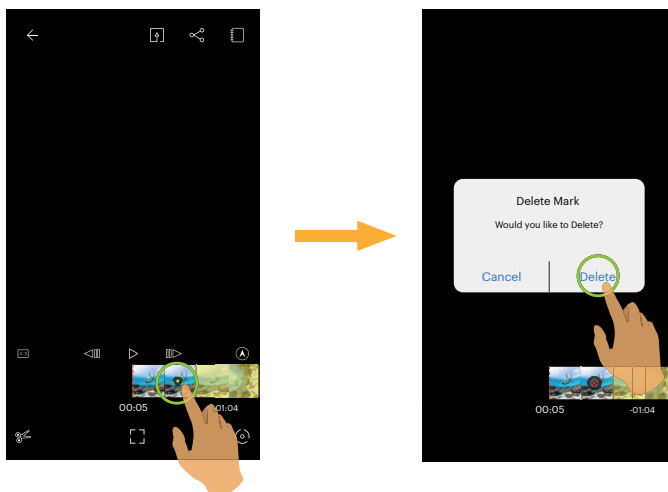 
## Clear all editing marks

1. In the advanced editing interface, tap  to enter the setup menu.
2. Tap [Clear all editing marks] to pop-up the interface, then tap "OK" to delete.

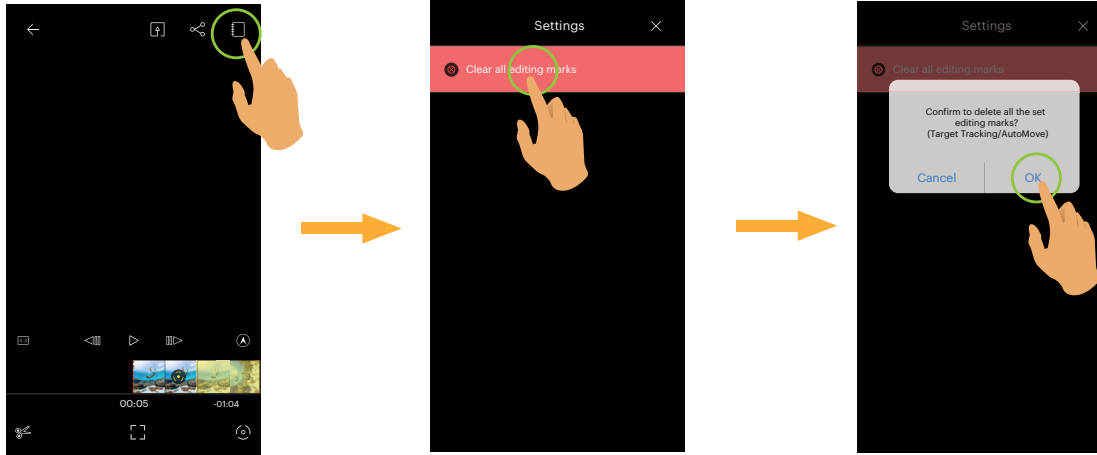

## Delete single edit mark

1. Press and hold the set edit point on the time axis bar and the  icon will appear.
2. Tap [Delete] on the interface to confirm deletion.

 




## Sharing

Sharing photos or videos to social network sites.

 
### Single Playback Mode:

#### Spherical and VR Files

 
1. Select the file you want to share and tap  to start downloading.
2. Select the type of image you want to share.

-  If the selected image type is "Global", the file will be shared in its' original format.
-  The sharing process varies with different type of video files you select.

 
#### Global (2:1) and Global (1:1) Photo Files

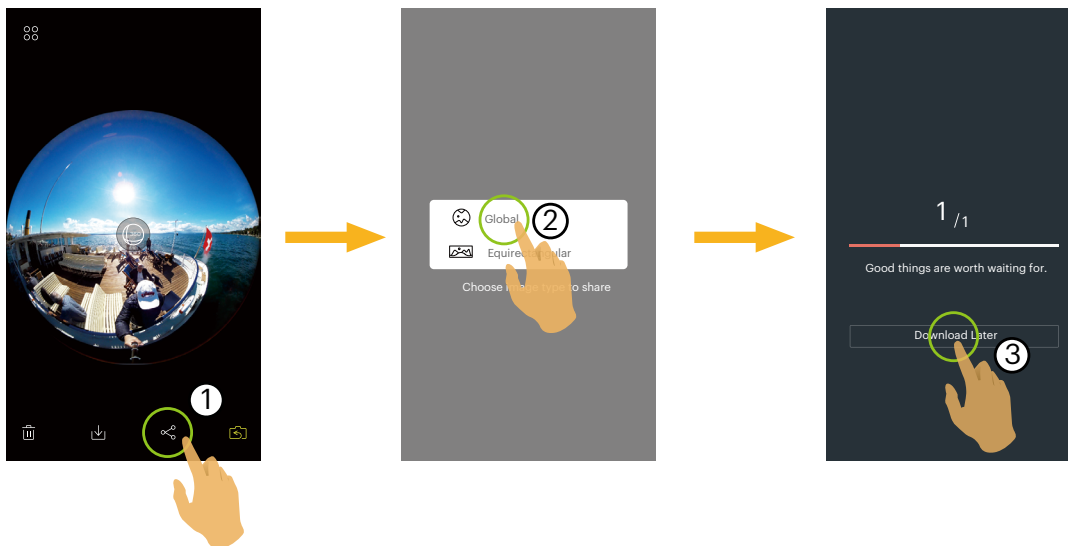

## VR Stitch (2:1) Photo File

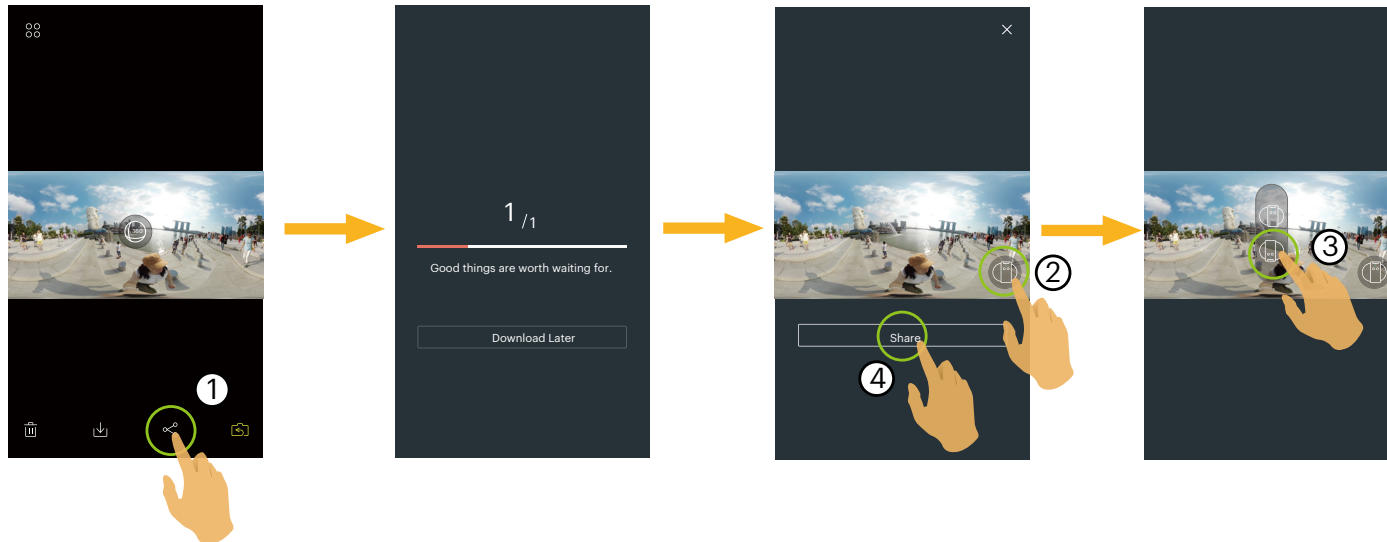

## Dual Global (2:1) Video File

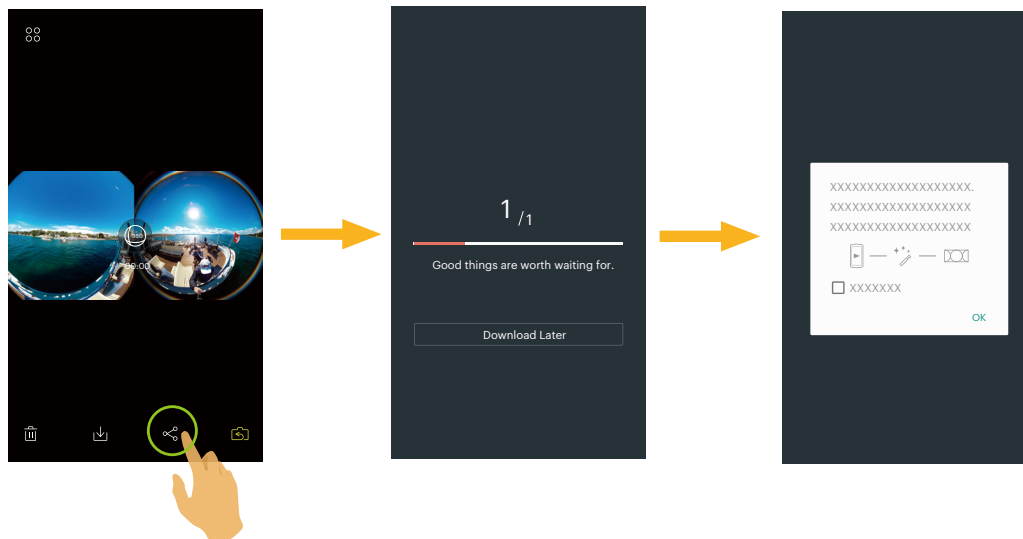 


3. Tap [Download Later] in the downloading process to cancel downloading.


4. After the download is completed, the file on your Smart Device can be shared.

## ANDROID System

After downloading, select the shooting orientation of the camera:

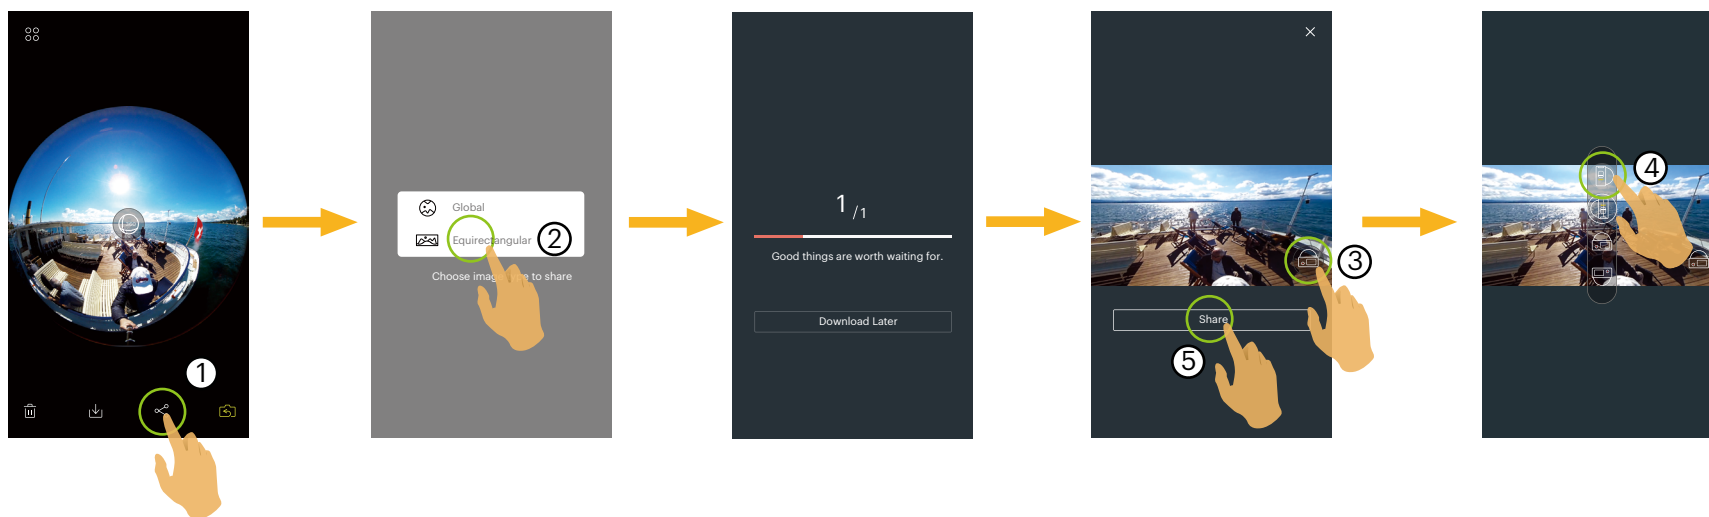 



- If the mobile data network is enabled on your Smart Device, the current file can be shared.
- If the mobile data network is not enabled on your Smart Device, select the network:  
[SETTING NETWORK]: Open mobile data network or Wi-Fi for internet access. When the network is changed, this APP will close automatically.  
[CONTINUE]: Select the social network site to share (This APP will continue to run).  
[CANCEL]: Cancel sharing.

 Current social networks that support VR playback include: YOUKU™, GOOGLE PHOTO™ and FACKBOOK™.

## ■ iOS System

After downloading, select the shooting orientation of the camera:

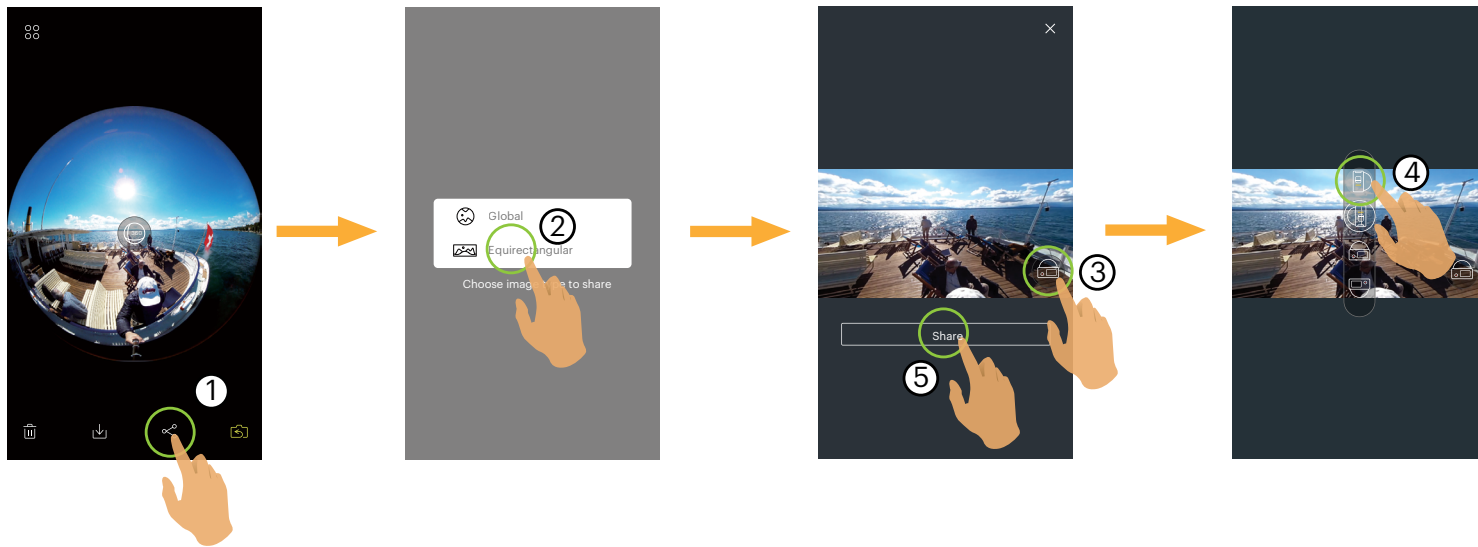 


 The file cannot be shared before it is downloaded.

 
- If the mobile data network is enabled on your Smart Device, the current file can be shared.
- If the mobile data network is not enabled on your Smart Device, the share function is not available.

 


## Global (1:1) and VR Stitch Video File:

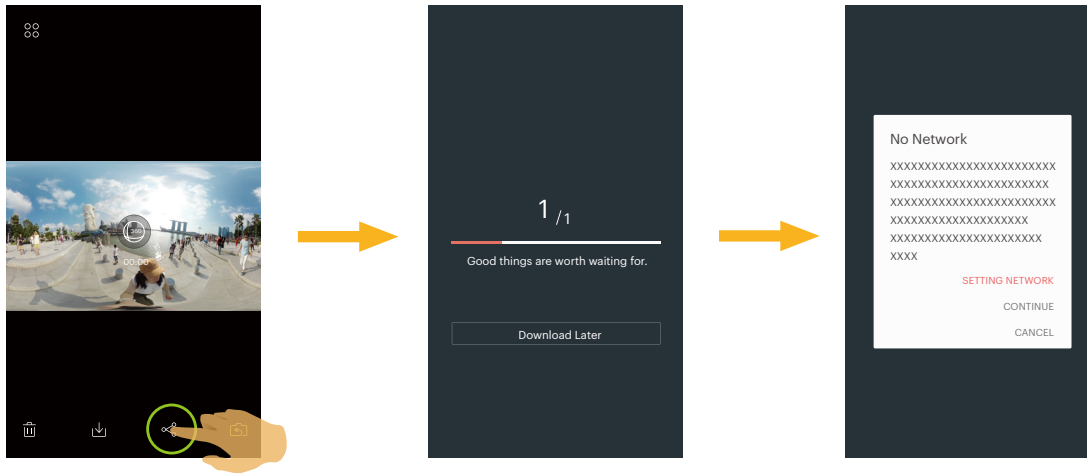 


 
## Front File


1. Slide one finger to select a file to share and tap  to start downloading.
2. Tap [Download Later] in the downloading process to cancel downloading.
3. After the download is completed, the file on your Smart Device can be shared. Refer to the operating method of Spherical and VR Files sharing.

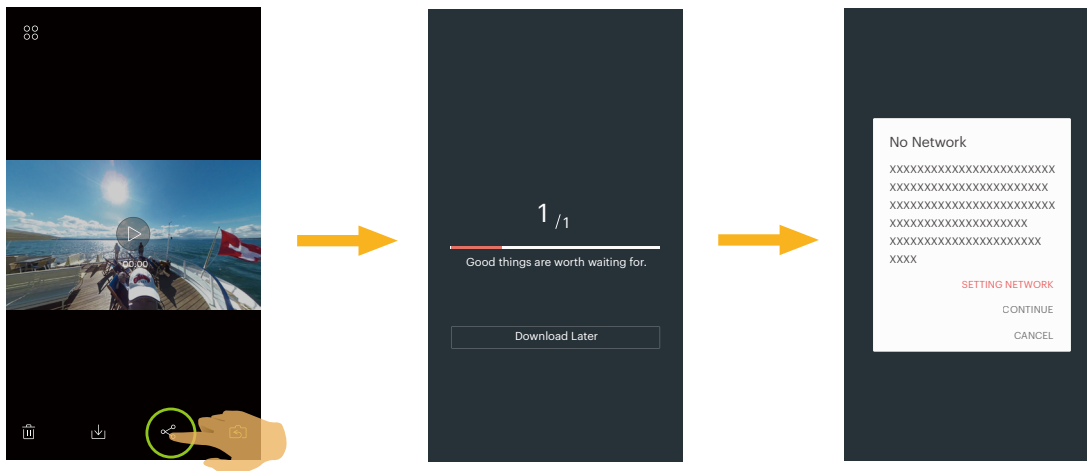

**Index Playback Mode:**

Select one or more file(s) that you want to share, tap , (for sharing "Equirectangular" photo files, please select a photo) and tap "OK" to start the download. Refer to the operating method of Single Playback Mode sharing.

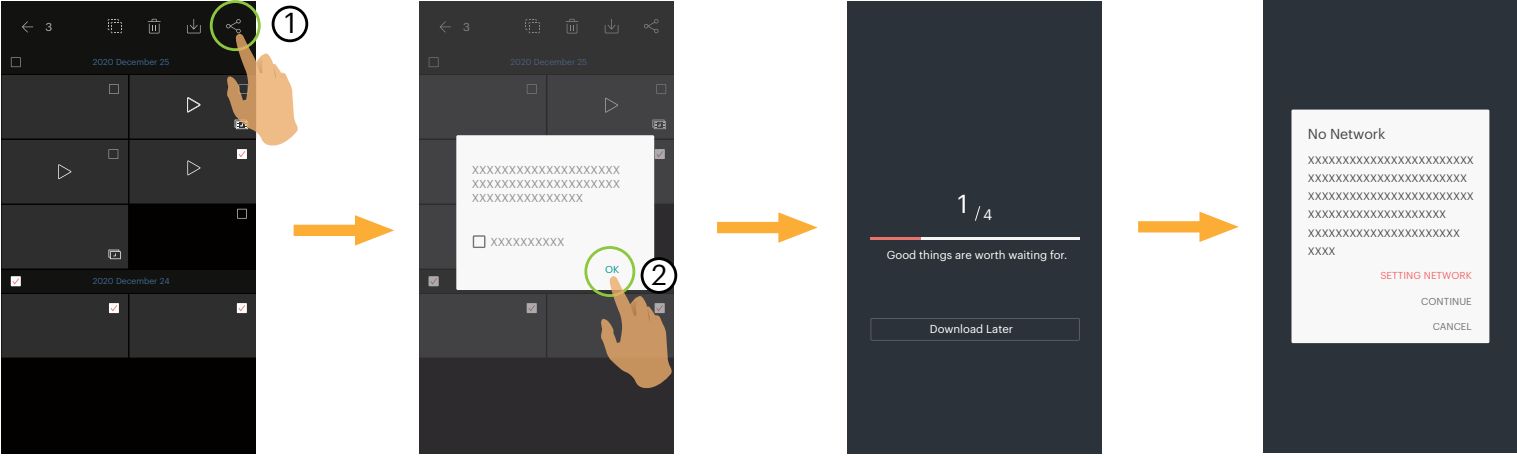


 iOS Smart Device doesn't support the function of sharing multiple files.


## Delete

Delete the selected photos or videos.

 
### Index Playback Mode:

1. Select one or more file(s) you want to download and tap .
2. Select [DELETE] to confirm the deletion in the pop-up prompt screen.

 
### Single Playback Mode:

1. Select the file you want to delete and tap .
2. Select [DELETE] to confirm the deletion in the pop-up prompt screen.

ANDROID System

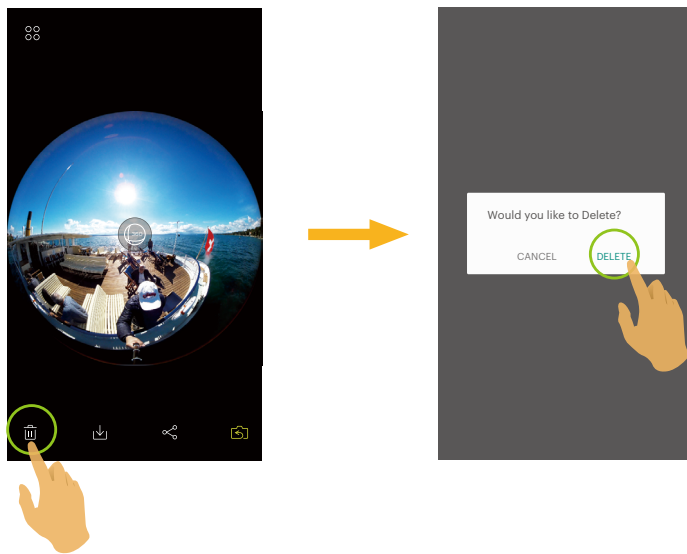



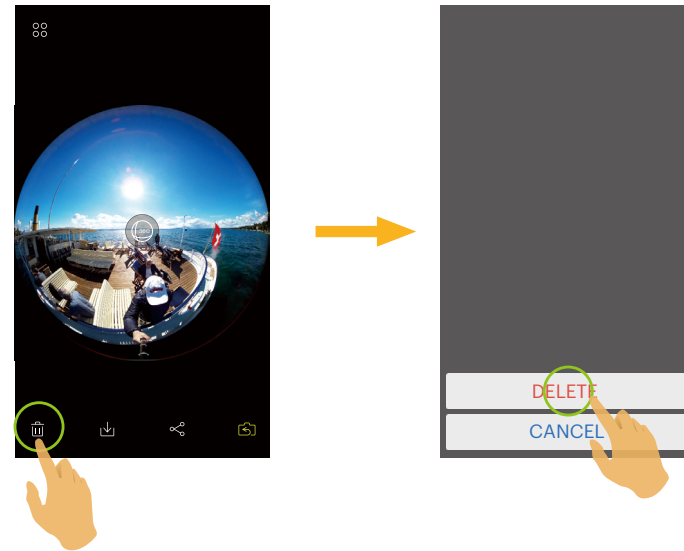



 
iOS System





## Playing Videos (Camera and Smart Device Single Playback Mode)



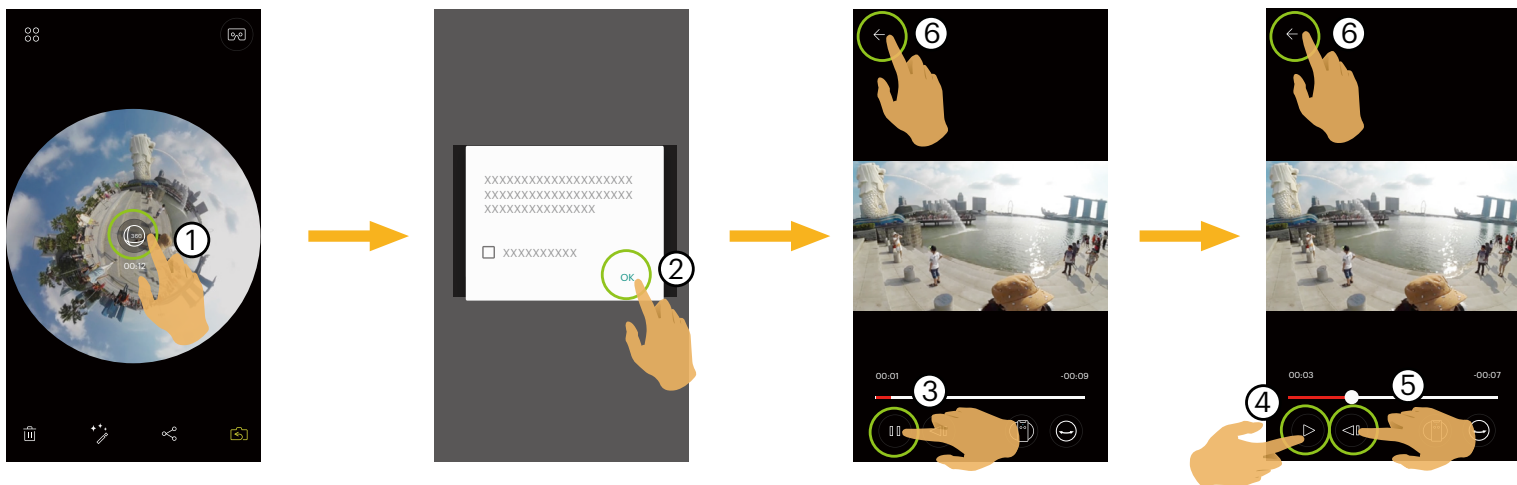

Slow wireless transmission may impact seamless viewing. We suggest downloading the file to your Smart Device before viewing.

 
1. Tap  /  to play the video.
2. Select [OK] to play in the pop-up prompt screen.
3. Tap  to pause the video.
4. Tap  to continue the video.
5. Tap  to replay the video.
6. Tap  to return to the previous interface.









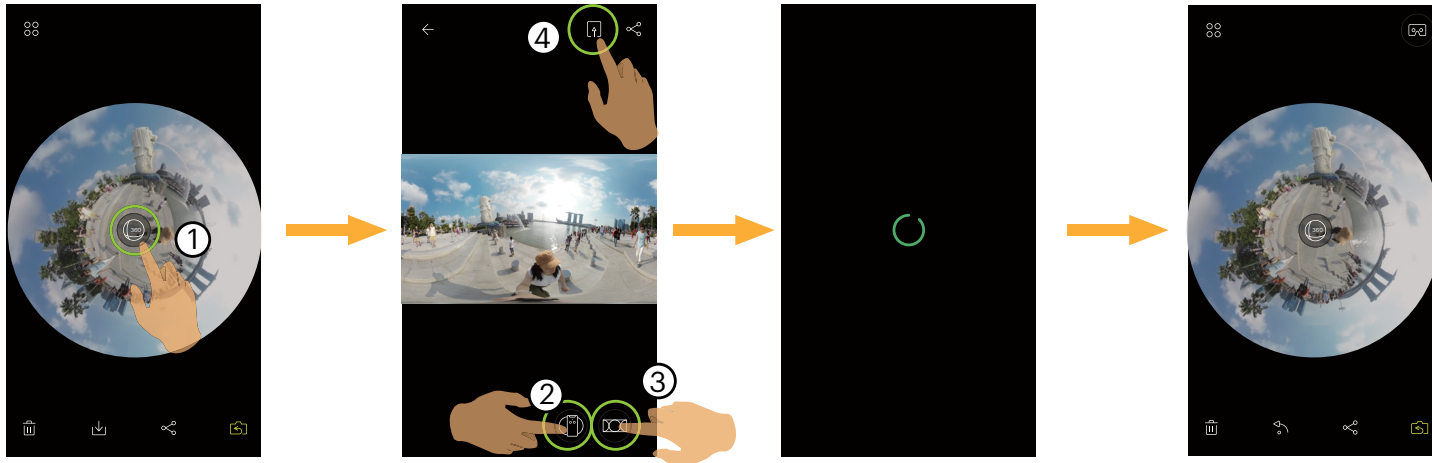

-  Toggle between unfold mode and viewing modes is possible while playing back spherical / VR videos.
-  If you are experiencing a black screen or interruptions when playing back video, it is likely your Smart Device does not support the current video resolution. Please use the PIXPRO 360 VR Suite (PC version).


## VR / Global Photos Playback (Camera and Smart Device Single Playback Mode)


1. Tap  to view the photo(s).
2. Tap  to switch viewing mode.
3. Tap  to switch Unfold Mode.
4. Tap  to export newly created files.

 




Type	Icon	Mode	Operating methods (Using Smart Devices touch screen)
		Equirectangular	This function is not touch supported
		Magic Flat	Move up/down, move to the left/right
		Fish Eye	Slide up and down to preview the vertical direction; slide left and right to preview the horizontal direction
		Little Planet	By sliding up and down / left and right, the effect of Little Planet can be achieved
		Dome	Flip up/down, move to the left/right
		Magic Flat	Move up/down, move to the left/right

## **VR Cardboard** (VR Glasses Playback)

You can use VR Cardboard to watch downloaded Spherical and VR files from your Smart Device. Icon  will display on the single playback screen of these files.

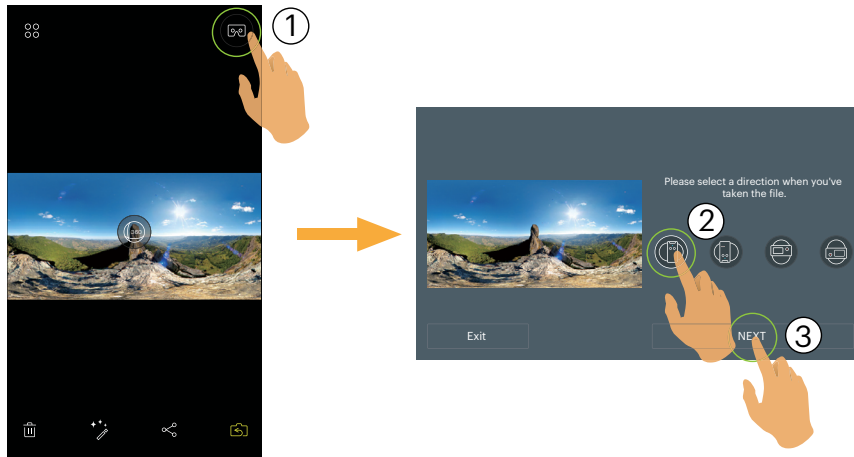Tap , select a direction that is consistent with the camera body shooting, and then tap ] NEXT] to play in VR.



-  Selecting the appropriate video orientation that is consistent with the camera orientation when shot, videos can be played in an upright direction.
-  VR Playback is only able for the Spherical and VR files in Single Playback on your Smart Device. Following the screen prompts to place your Smart Device in the Cardboard is recommended.





Dual Screen VR (for Cardboard)

 










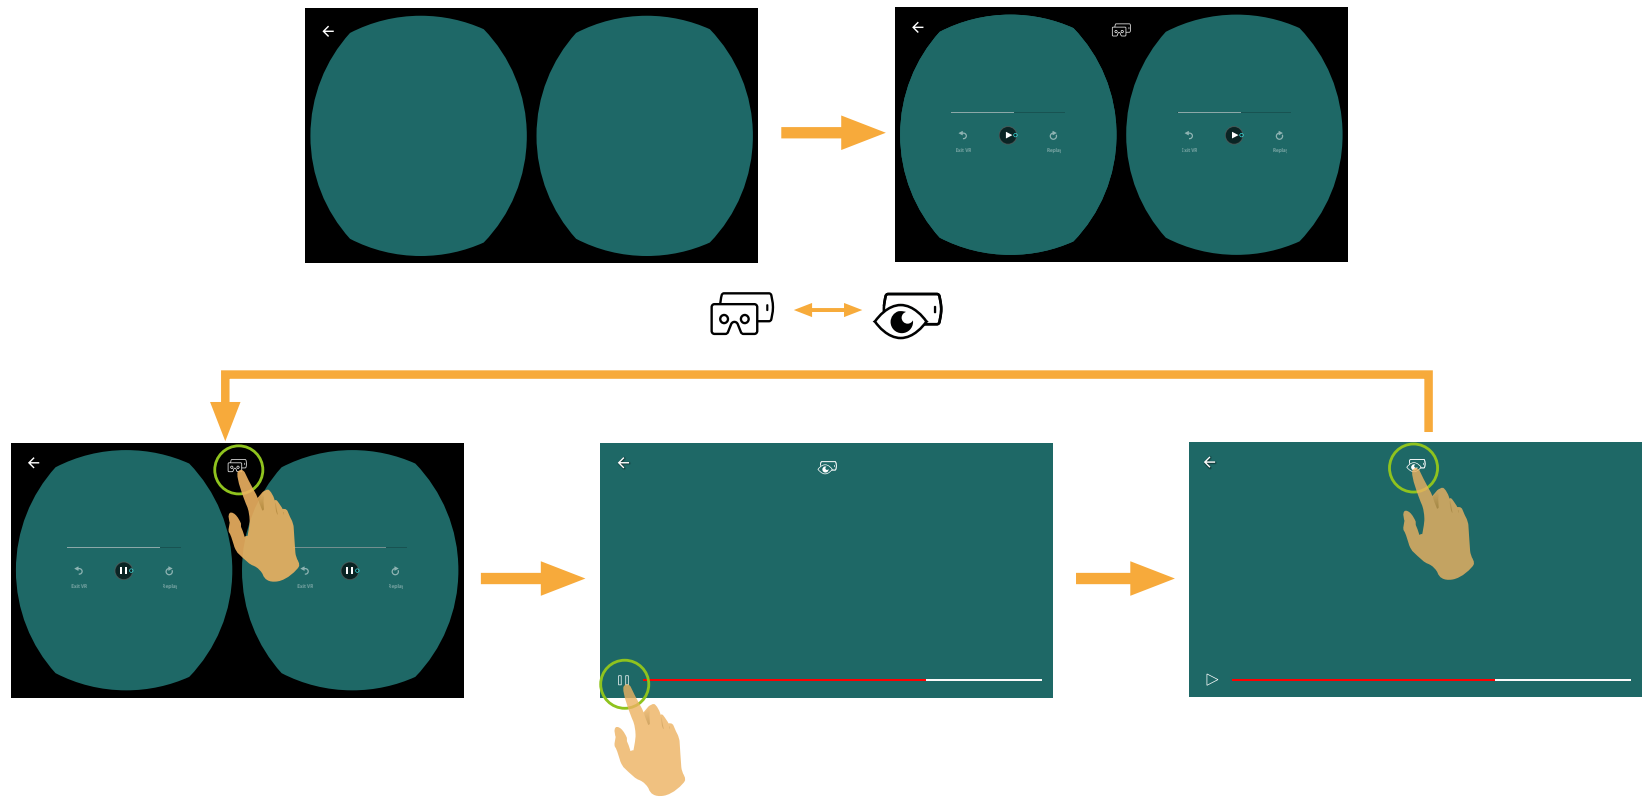

Single Screen VR



 
-   In the VR Cardboard play mode, zooming in or out, sliding the viewpoint etc. are not available.


## Spherical and VR Video Play



 Exit VR	Exit VR Play	 Replay	Replay
	Play		Pause
	Cursor Control		Return to the previous interface (iOS System)
	Switch to Single Screen VR		Switch to Dual VR
	Return to the previous interface (ANDROID System)		
		Timeline	

## Spherical (1:1) and VR Stitch Photo Play

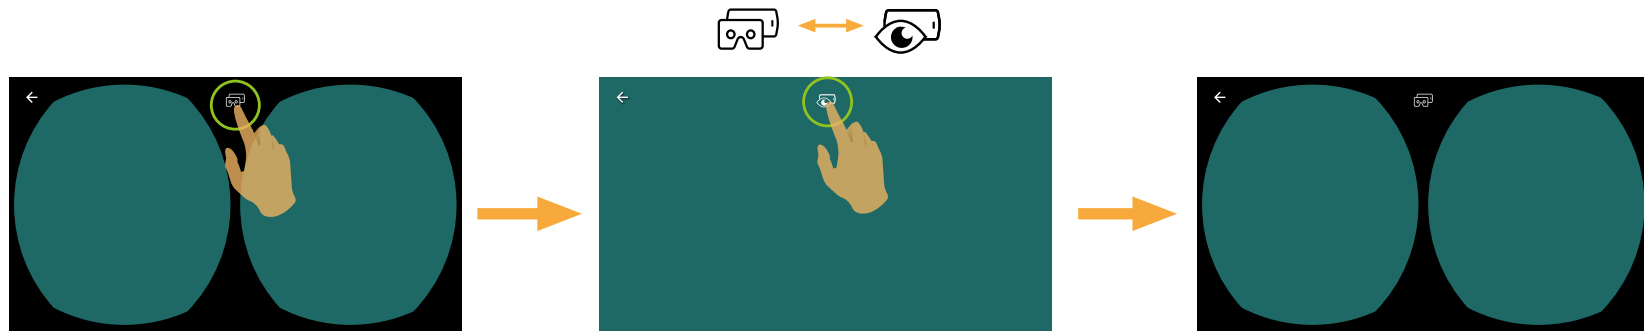

 
 If the VR Cardboard you use has a neodymium magnet ring on one side and it is compatible with the magnetic gyro sensors of your Smart Device, you can use this method to control video playback and interaction.





## **Menu** ☰ (Camera and Smart Device Index Playback Mode)

1. Tap ☰ to display the menu.
2. Tap your desired setup item.
3. Tap ← to return to the Menu.
4. Tap ✕ to return to Playback Interface.

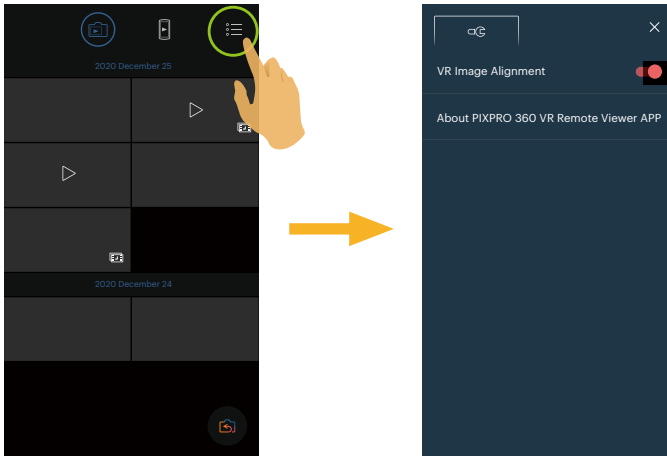

### **VR Image Alignment**

The VR image alignment function is enabled by default, and it will automatically make horizontal positive adjustments during VR photo playback.

### **About PIXPRO 360 VR Remote Viewer APP**

See Page 26 for explanations.



© 2023 JK Imaging Ltd. All Rights Reserved.

The Kodak trademark, logo and trade dress are used under license from Eastman Kodak Company.

All other logos, products or company names that are referred to in this document are trade names, trademarks or registered trademarks of their holders. The holders are not affiliated with JK Imaging Ltd, our products or our website.

JK Imaging Ltd, 17239 So. Main Street, Gardena, CA 90248 USA

[kodakpixpro.com](http://kodakpixpro.com)